

OWNER'S MANUAL

Drive Unit Display Unit Battery Pack Battery Charger

^{*} This owner's manual is original instruction.

^{*} Product and specifications are subject to change without notice.



Introduction

These original instru	uctions have	been pi	repared	for your	Drive l	Unit,	display	unit,	battery
pack and battery ch	arger.								

	=		_
П	п	п	_
П	п	н	_

This manual is not intended as a comprehensive use, service, repair or maintenance manual. Please see your dealer for all service, repairs or maintenance. Your dealer may also be able to refer you to classes, clinics or books on bicycle use, service, repair or maintenance.

Drive Unit, Display Unit,
Battery Pack, Battery Charger
OWNER'S MANUAL
©2019 by Yamaha Motor Co., Ltd.
2nd edition, June 2019
All rights reserved.
Any reprinting or unauthorized use without the written permission of Yamaha Motor Co., Ltd.
is expressly prohibited.

Contents

General warning	p.	1
Electric bike components	p.	2
A. Introduction	p.	2
B. Location of the warning and specification labels	p.	3
C. Description	p.	4
D. E-Bike Systems	p.	5
The e-Bike Systems are designed to give you the optimal amount of power		
assist.	p.	5
Multiple power assist modes are available.	p.	5
Conditions that could decrease remaining assist distance	p.	6
E.	p.	7
F. Instrument and control functions	p.	10
Display unit (Display A)	p.	10
Display unit (Display X)		
Display unit (Display C)	•	32
G. Battery pack and charging procedure		54
Appropriate charging environments		55
Inappropriate charging environments and solutions	•	55
Charging the battery pack mounted on the bicycle (Rear carrier type)		56
Charging the battery pack mounted on the bicycle (Down tube type)		56
Charging the battery pack mounted on the bicycle (Multi location type)		56
Charging the battery pack removed from the bicycle		58
Reading the charging status for battery pack	p.	63
Reading the charging status for display unit (Applies only to models		
equipped with the Multi location type battery pack.)	•	64
Charging time guidelines	•	66
H. Checking the residual battery capacity	p.	67
Residual battery capacity indicator display and estimate of residual battery		
capacity for display unit	p.	67
Display of the battery capacity indicator lamps and the estimate of the		
residual battery capacity		69
I. Pre-operation check		71
J. Cleaning, maintenance and storage	p.	71
Caring for the battery pack	p.	71
Maintenance for the Drive Unit	•	72
Storage	p.	72
Long storage period (1 month or longer) and using it again after a long		
storage period	p.	72
K. Transport	p.	72
L. Consumer information	p.	73
Disposal	p.	73
For EU countries:	•	73
M. Simplified declaration of conformity	•	73
N. Troubleshooting	p.	74
E-Bike Systems	p.	74
Pushing assist function	•	81
Power supply of external devices via USB connection Wireless communication with Plustooth law energy technology	•	81
Wireless communication with Bluetooth low energy technology	p.	82
Battery pack and charger	•	83
O. Specifications	p.	86

General warning

FAILURE TO FOLLOW THE WARNINGS CONTAINED IN THIS MANUAL CAN RESULT IN SERIOUS INJURY OR DEATH.

Particularly important information is distinguished in this manual by the following notations:

\triangle	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
▲ WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

1. Electric bike components

A. Introduction




The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by YAMAHA MOTOR CO., LTD. is under license.

^{*} Applies to Display X and Display C.


B. Location of the warning and specification labels

Read and understand all of the labels on your battery pack and battery charger. These labels contain important information for safe and proper operation. Never remove any labels from your battery pack and battery charger:

Battery pack

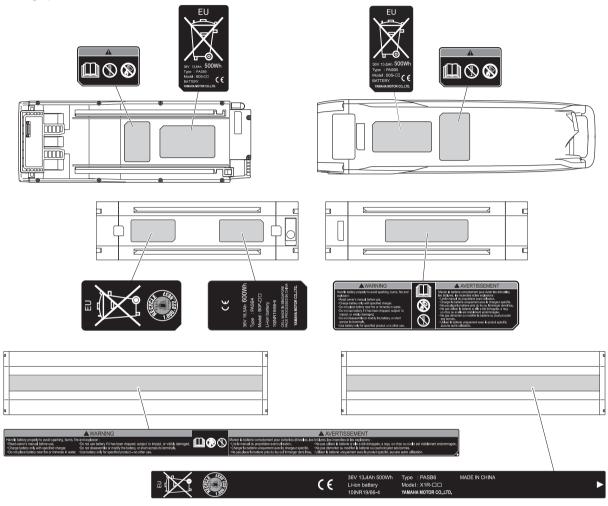


Battery charger

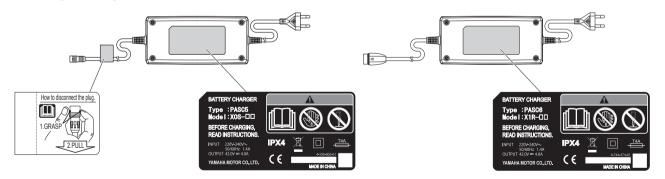

Familiarize yourself with the following pictograms and read the explanatory text, then make sure to check the pictograms that apply to your model.



C. Description

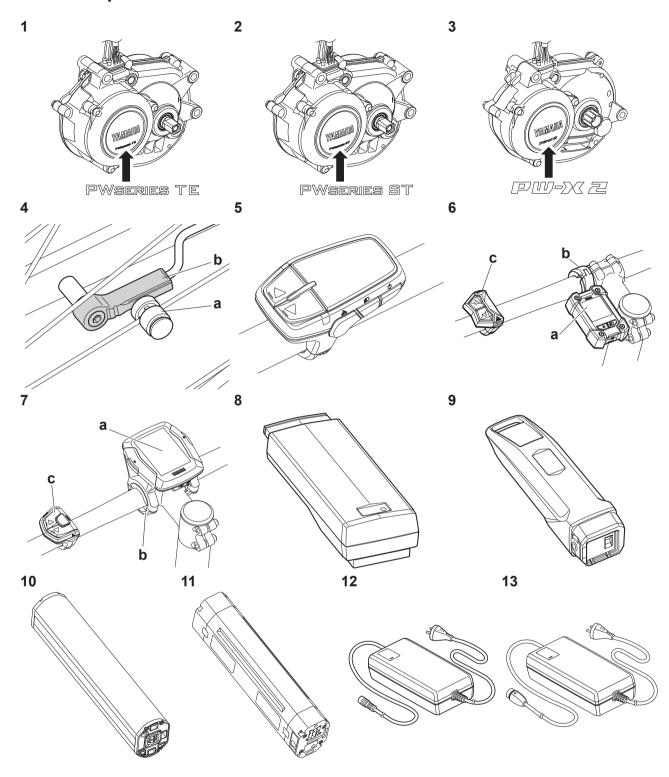

- 1. Drive Unit (PWseries TE)
- 2. Drive Unit (PWseries ST)
- 3. Drive Unit (PW-X2)
- 4. Speed sensor set
 - a) Magnet sensor spoke type b) Pick up
- 5. Display unit (Display A)
- 6. Display unit (Display X)
 - a) Display
 - b) Clamp
 - c) Switch
- 7. Display unit (Display C)
 - a) Display
 - b) Clamp
 - c) Switch
- 8. Battery pack (Rear carrier type 400 Wh/500 Wh)
- 9. Battery pack (Down tube type 400 Wh/500 Wh)
- 10 Battery pack (Multi location type 500 Wh)
- 11.Battery pack (Multi location type 600 Wh)
- 12.Battery charger (PASC5)
- 13.Battery charger (PASC6)

D. E-Bike Systems

The e-Bike Systems are designed to give you the optimal amount of power assist.

It assists you within a standard range based on factors such as your pedaling strength, bicycle speed, and current gear.

The e-Bike Systems do not assist in the following situations:

- · When the display unit's power is off.
- · When you are moving 25 km/h or faster.
- When you are not pedaling and the pushing assist switch is released.
- · When there is no residual battery capacity.
- When the automatic power off function* works.
 - * Power turns off automatically when you do not operate the e-Bike Systems for 5 minutes.
- · When the assist mode is set to Off mode.

Multiple power assist modes are available.

Choose from Extra Power mode, High-Performance mode, Standard mode, Eco mode, +Eco mode, Off mode and Automatic Support mode to suit your riding conditions.

See "Displaying and switching the assist mode" for information on switching between assist modes.

Extra Power mode* Use when climbing rough terrain.	
High-Performance mode	Use when you want to ride more comfortably, such as when climbing a steep hill.
Standard mode	Use when riding on flat roads or climbing gentle hills.
Eco mode +Eco mode	Use when you want to ride as far as possible.
Off mode	Use when you want to ride without power assist. You can still use the other display unit functions.
Automatic Support mode	Use when you want the assist mode to change automatically to the best suited mode depending on the riding conditions.

^{*} Applies only to the Drive Unit (PW-X2).

Conditions that could decrease remaining assist distance

The remaining assist distance will decrease when riding in the following conditions:

- Frequent starts and stops
- · Numerous steep inclines
- Poor road surface conditions
- When riding together with children
- · Riding into a strong head wind
- Low air temperature
- Worn-out battery pack
- When using the headlight (applies only to models equipped with lights powered by the battery pack)
- Frequent acceleration
- · Heavier rider and luggage weight
- · Higher assist mode
- Higher riding speed

Remaining assist distance will also decrease if the bicycle is not maintained properly. Examples of inadequate maintenance that could decrease remaining assist distance:

- Low tire pressure
- Chain not turning smoothly
- · Brake engaged constantly

E. A Safety information

Never use this battery charger to charge other electrical appliances.

Do not use any other charger or charging method to recharge the special batteries. Using any other charger could result in fire, explosion, or damage the batteries.

This battery charger can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the battery charger in a safe way and understand the hazards involved. Children shall not play with the battery charger. Cleaning and user maintenance shall not be made by children without supervision.

Although the battery charger is waterproof, never allow it to become immersed in water or other fluids. In addition, never use the battery charger if the terminals are wet.

Never handle the power plug, charging plug or touch the charger contacts with wet hands. This could result in electric shock.

Do not touch charger contacts with metallic objects. Do not allow foreign material to cause short circuit of the contacts. This could result in electric shock, fire, or damage the battery charger.

Periodically remove dust from the power plug. Dampness or other issues could reduce the effectiveness of the insulation, resulting in fire.

Never disassemble or modify the battery charger. This could result in fire or electric shock.

Do not use with a power strip or extension cord. Using a power strip or similar methods may exceed rated current and can result in fire.

Do not use with the cable tied or rolled up, and do not store with the cable wrapped around the charger main body. Cable damage can result in fire or electric shock.

Firmly insert the power plug and the charging plug into the socket. Failure to insert the power plug and the charging plug completely can result in fire caused by electric shock or overheating.

Do not use the battery charger near flammable material or gas. This could result in fire or explosion.

Never cover the battery charger or place other objects on top of it while charging. This could result in internal overheating leading to fire.

Do not drop the battery charger or expose it to strong impacts. Otherwise, it could cause a fire or electric shock.

Store the battery pack and battery charger out of reach of children.

Do not touch the battery pack or battery charger while it is charging. As the battery pack or battery charger reaches 40–70 °C during charging, touching it could result in burns.

Do not use if the battery pack case is damaged, cracked, or if you smell any unusual odors. Leaking battery fluid can cause serious injury.

Do not short the contacts of the battery pack. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.

Do not disassemble or modify the battery pack. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.

If the power cable is damaged, stop using the battery charger and have it inspected at a bicycle dealer.

Do not turn the pedals or move the bicycle while the battery charger is connected. Doing so could cause the power cable to become tangled in the pedals, resulting in damage to the battery charger, power cable, and/or plug.

Handle the power cable with care. Connecting the battery charger from indoors while the bicycle is outdoors could result in the power cable becoming pinched and damaged in a doorway or window.

Do not run over the power cable or plug with the wheels of the bicycle. Doing so could result in damage to the power cable or plug.

Do not drop the battery pack or subject it to impact. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.

Do not dispose of the battery pack in a fire or expose it to a heat source. Doing so could cause fire, or explosion, resulting in serious injury or property damage.

Do not modify or disassemble the e-Bike Systems. Do not install anything other than genuine parts and accessories. Doing so could result in product damage, malfunction, or increase your risk of injury.

When stopped, be sure to apply the front and rear brakes and keep both feet on the ground. Placing one's foot on the pedal when stopped may unintentionally engage the power assist function, which could result in loss of control and serious injury.

Do not ride the bicycle if there is any irregularity with the battery pack or e-Bike Systems. Doing so could lead to loss of control and serious injury.

Be sure to check the residual battery capacity before riding at night. The headlight powered by the battery pack will turn off soon after the residual battery capacity has decreased to where power assisted riding is no longer possible. Riding without an operating headlight can increase your risk of injury.

Do not start off by running with one foot on a pedal and one foot on the ground and then mounting the bicycle after it has reached a certain speed. Doing so could result in loss of control or serious injury. Be sure to start riding only after you are seated properly on the bicycle seat.

Do not press the pushing assist switch if the rear tire is off the ground. Otherwise, the tire will turn at high speed in the air and you could be injured.

Do not use the wireless function with Bluetooth low energy technology in areas such as hospitals or medical institutions where use of electronic equipment or wireless equipment is prohibited. Otherwise, this could affect the medical equipment, etc. and cause an accident.


When using the wireless function with Bluetooth low energy technology, keep the display at a safe distance from heart pacemakers in use. Otherwise, the radio waves could affect the heart pacemaker function.

Do not use the wireless function with Bluetooth low energy technology near automatic control equipment such as automatic doors, fire alarms, etc. Otherwise, the radio waves could affect the equipment and cause an accident through possible malfunction or unintentional operation.

Before equipping the bicycle with a Multi location type 500 Wh battery pack, make sure that there is no foreign matter or water in the connector on the bicycle. Otherwise, it could lead to heat generation, smoke and/or a fire owing to short-circuiting of the terminals.

For bicycles equipped with a Multi location type 500 Wh battery pack, do not remove the battery pack from the bicycle when cleaning the bicycle. Otherwise, water could enter the connector and cause heat generation, smoke and/or a fire.

F. Instrument and control functions Display unit (Display A)

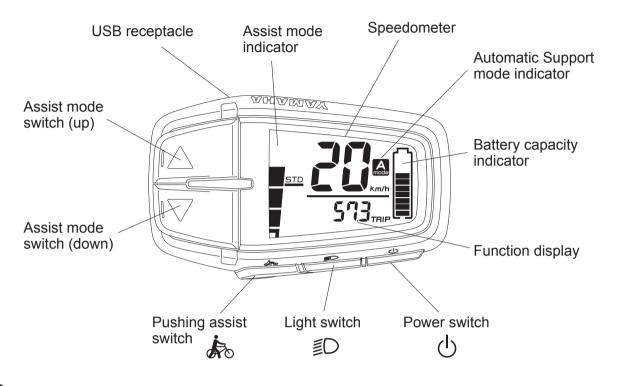


The USB receptacle is for connecting the designated YAMAHA tool; it cannot be used as a power supply.



Display unit (Display A)

The display unit offers the following operations and information displays.

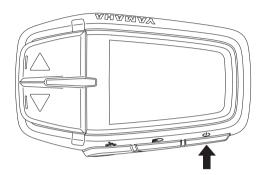

O Power "On/Off"

Each time you press the power switch, the power is turned "On" and "Off".

When you turn on the power, all of the displays come up. After that, it transitions to the main riding display.

TIP

- When you turn on the power, the assist mode is Automatically set to Standard mode or Automatic Support mode.
- Keep your feet off the pedals when turning on the display unit. Also, do not start riding immediately after turning on the display unit. Doing so could weaken the assist power. (Weak assist power in either of these cases is not a malfunction.) If you did either of the above by accident, remove your feet from the pedals, turn on the power again, and wait a moment (approximately two seconds) before starting to ride.



O Displaying and switching the assist mode


You can select the assist mode by using the assist mode switches (up & down).

The selected assist mode is displayed by the assist mode indicator.

- When you press the assist mode switch (up), the mode changes from "OFF" to "+ECO", or from "+ECO" to "ECO", or "ECO" to "STD", or "STD" to "HIGH", or "HIGH" to "EXPW".
- When you press the assist mode switch (down), the mode changes from "EXPW" to "HIGH", or from "HIGH" to "STD", or "STD" to "ECO", or "ECO" to "+ECO", or "+ECO" to "OFF".

TIP

- Bicycles equipped with the PWseries TE or PWseries ST drive unit have no Extra Power mode.
- Further pressing of the assist mode switch will not cycle the assist mode selections.

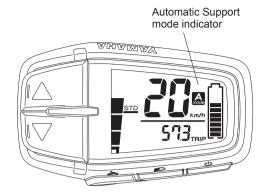


The Automatic Support mode, which enables automatic change to the optimal assist mode according to the riding conditions, can also be used.

- To use the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. The Automatic Support mode indicator will light up and the mode will be changed to the Automatic Support mode.
- To cancel the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. The Automatic Support mode indicator will go off and the Automatic Support mode will be canceled.

TIP

- Even if you press the assist mode switches (up & down) while in Automatic Support mode, the assist mode cannot be changed.
- The Automatic Support mode is saved when the power is turned off. When you turn on the power again, the assist mode will be in the Automatic Support mode.

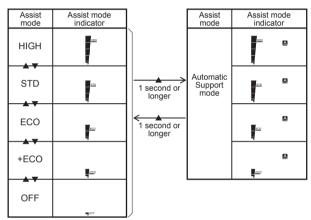

Assist mode indicator

HIGH

STD

1 second or longer

STD

Company

Assist mode indicator


Automatic Support mode

Support mode

OFF

PWseries TE drive unit

PWseries ST drive unit

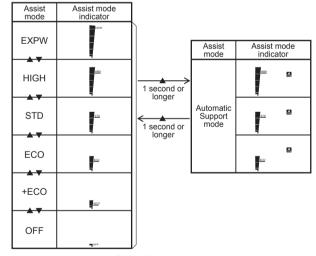

PW-X2 drive unit


Speedometer Speedometer Speedometer Speedometer Speedometer Speedometer Speedometer Speedometer Speedometer Speedometer

○ Speedometer

The speedometer displays your bicycle speed (in kilometer per hour or mile per hour). To select the km/mile, see "km/mile setting".


TIP

If your bicycle speed is less than 2.0 km/h or 1.2 MPH, the speedometer displays "0 km/h or 0 MPH".

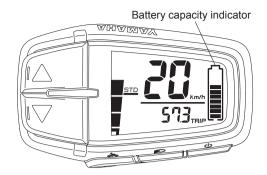

○ Battery capacity indicator

The battery capacity indicator displays an estimate of how much capacity is left in the battery.

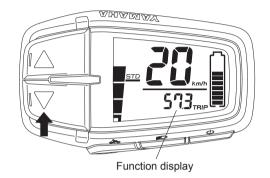

Function display

The function display can display the following functions.

- Odometer
- Trip meter
- Range (Remaining assist distance)

Push the assist mode switch (down) for 1 second or longer, the display changes as follows:

Odometer → Trip meter → Range → Odometer

You can reset the data for trip meter.



Odometer

This displays the total distance (in kilometers or miles) ridden while the power was on.

The odometer cannot be reset.



• Trip meter

This displays the total riding distance (in kilometers or miles) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the trip meter and begin counting a new total, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the trip meter is displayed.




Range (Remaining assist distance)

This displays an estimate of the distance (in kilometers or miles) that can be ridden with assist on the residual battery capacity of the battery installed. If you switch the assist mode when the remaining assist distance is displayed, the estimate of the distance that can be ridden with assist changes.

The remaining assist distance estimate cannot be reset.

TIP_

- The remaining assist distance changes depending on the riding situation (hills, headwind, etc.) and as the battery runs down.
- If in Off mode, "- - -" is displayed.

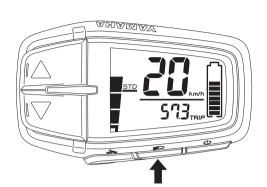

○ Headlight "On/Off" (Applies only to models equipped with a headlight powered by the battery pack. The taillight, which is powered by the battery pack, is switched on/off with the headlight.)

Each time you press the light switch, the headlight switches between "On" and "Off".



Use the following steps to set the km/mile setting.


- 1. Make sure that the display unit is turned on.
- 2. Select the odometer display in the function display.
- 3. Press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer.
- 4. When either "km/h" or "MPH" flashes, release the switch
- 5. Use the assist mode switches (up & down) to set either the km or mile unit.
- While the unit that you want to set is flashing, press the assist mode switch (down) for 1 second or longer, and release the switch when the display returns to the main riding display.


⚠ WARNING


For all setting procedures, be sure to stop the bicycle and perform the required settings in a safe location. Otherwise, lack of attention to surrounding traffic or other hazards could cause an accident.


TIP _

- The settings cannot be adjusted while riding.
- If you do the following during setting, the item that you are setting will be canceled and the display will return to the main riding display.
 - Turning the crank (pedal) in the traveling direction
 - Turning the rear wheel at 2 km/h and more
 - Pushing the pushing assist switch

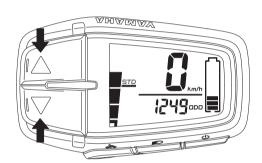

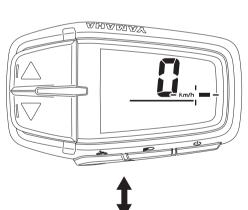

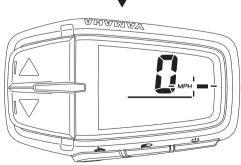

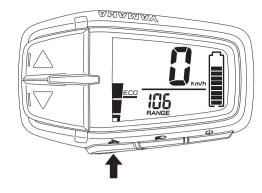

O Pushing assist 🛵

When you are on or off the bicycle and start moving it, you can use pushing assist without pedaling the bicycle.


To use pushing assist, press and hold the pushing assist switch.

Pushing assist will not work in the following situations:

- When you release the pushing assist switch.
- If you press another switch at the same time.
- · When you start to pedal.
- If your bicycle speed exceeds 6 km/h.
- · If you select Off mode.
- If the wheels are not turning (when braking or coming into contact with an obstacle, etc.).

TIP_

The maximum speed will vary depending on the selected gear. The maximum speed will become slower in a lower gear.

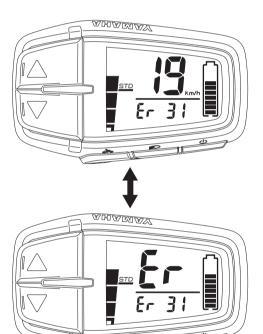


O Diagnosis mode

The e-Bike Systems are equipped with a diagnosis mode. If a malfunction or fault occurs in the e-Bike Systems, the main riding display and "Er" will be shown alternately, while an error description will inform you of the type of error in the function display. See "Troubleshooting" regarding symptoms and remedies for abnormal displays and abnormal flashing.


WARNING


If the problem cannot be solved, have your bicycle inspected by a dealer as soon as possible.

Display unit (Display X)

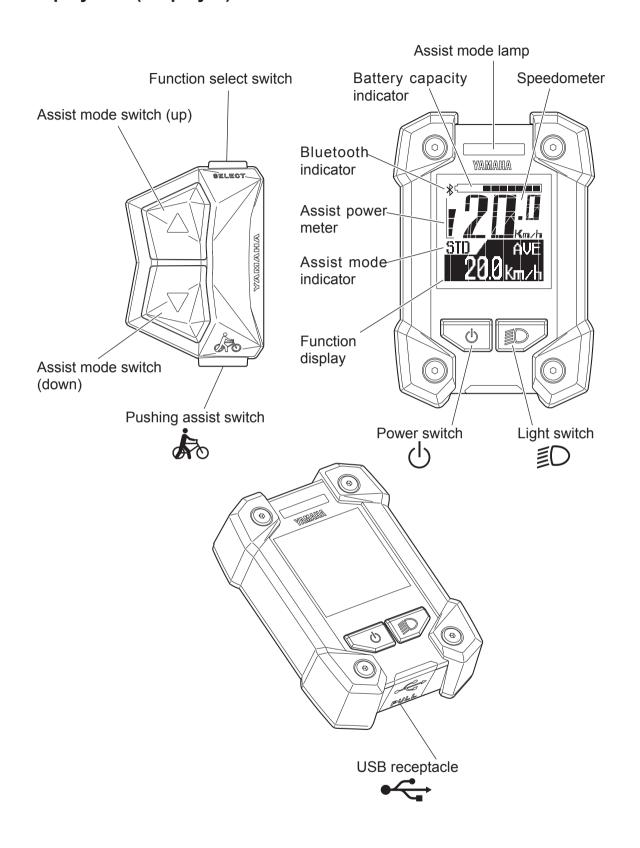



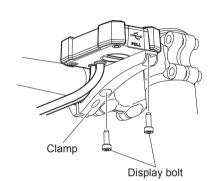



The display unit offers the following operations and information displays.

Installing the battery

The display unit needs to be removed and installed for changing the battery.

- Remove the two display bolts on back side of the clamp, and then remove the display unit.
- When installing the display unit, tighten the two display bolts from the back side of the clamp.

⚠ WARNING

Tighten the display bolts to 2 N·m. Otherwise, during riding, vibration could cause the display bolts to come loose with the risk that the display unit may fall off. A loose display could distract the rider or interfere with control.

TIP_

- The clamp and display unit might be installed on the right side of the stem.
- For models without this clamp, the above note does not apply.

Battery


Check if the rated battery (CR2032) is installed in the rear of the display unit.


If a battery is not installed, or if there is not sufficient battery power remaining, install a new battery.

To adjust the time, see "Stopwatch and settings".

TIP

- Make sure that the O-ring is installed correctly.
- Use a new CR2032 button cell battery (sold separately).
- When a battery is drained, whenever it turns on the vehicle power supply, the clock begins to count from 11:00. Please replace the battery, if such a condition appears.

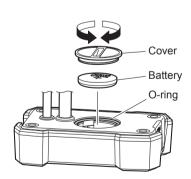

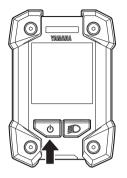

O Power "On/Off" (I)


Each time you press the power switch, the power is turned "On" and "Off".

When you turn on the power, the animation will be displayed.

After that, it transitions to the main riding display.

TIP_

- When you turn on the power, the assist mode is Automatically set to Standard mode or Automatic Support mode.
- Keep your feet off the pedals when turning on the display unit. Also, do not start riding immediately after turning on the display unit. Doing so could weaken the assist power. (Weak assist power in either of these cases is not a malfunction.) If you did either of the above by accident, remove your feet from the pedals, turn on the power again, and wait a moment (approximately two seconds) before starting to ride.

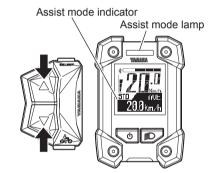

O Displaying and switching the assist mode


You can select the assist mode by using the assist mode switches (up & down).

The selected assist mode is displayed by the assist mode indicator and assist mode lamp color.

- When you press the assist mode switch (up), the mode changes from "OFF" to "+ECO", or from "+ECO" to "ECO", or "ECO" to "STD", or "STD" to "HIGH", or "HIGH" to "EXPW".
- When you press the assist mode switch (down), the mode changes from "EXPW" to "HIGH", or from "HIGH" to "STD", or "STD" to "ECO", or "ECO" to "+ECO", or "+ECO" to "OFF".



- Bicycles equipped with the PWseries TE or PWseries ST drive unit have no Extra Power mode.
- Further pressing of the assist mode switch will not cycle the assist mode selections.
- In the Off mode, the assist power meter is not displayed.
- You can keep the assist mode lamp unlit.
 For more information, see "Stopwatch and settings".

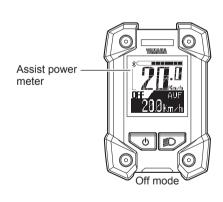



The Automatic Support mode, which enables automatic change to the optimal assist mode according to the riding conditions, can also be used.

- To use the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. "A:" will be added to the assist mode indicator and the mode will be changed to the Automatic Support mode.
- To cancel the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. "A:" will disappear from the assist mode indicator and the Automatic Support mode will be canceled.

TIP


- Even if you press the assist mode switches (up & down) while in Automatic Support mode, the assist mode cannot be changed.
- The Automatic Support mode is saved when the power is turned off. When you turn on the power again, the assist mode will be in the Automatic Support mode.

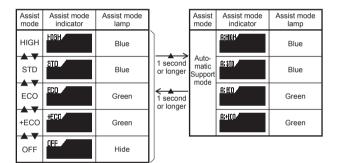

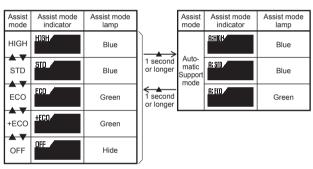


PWseries TE drive unit

PWseries ST drive unit

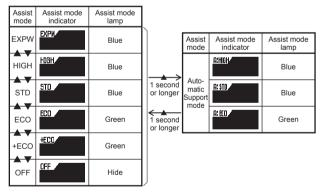

PW-X2 drive unit

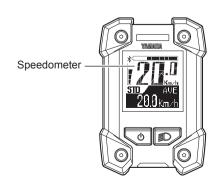

○ Speedometer

The speedometer displays your bicycle speed (in kilometer per hour or mile per hour). To select the km/mile, see "Stopwatch and settings".

TIP _

If your bicycle speed is less than 2.0 km/h or 1.2 MPH, the speedometer displays "0.0 km/h" or "0.0 MPH".



○ Battery capacity indicator


The battery capacity indicator displays an estimate of how much capacity is left in the battery.



○ Assist power meter

The assist power meter displays an estimate of the assist power during riding.

When the e-Bike Systems are not in operation, none of the segments of the assist power meter are displayed. When the e-Bike Systems are operating, as the assist power increases, the segments of the assist power meter are added one by one.

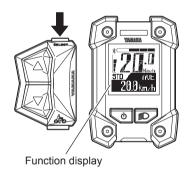

○ Function display

The function display can display the following functions.

- Odometer
- Trip meter
- Average bicycle speed
- · Maximum bicycle speed
- Range (Remaining assist distance)
- Battery capacity (%)
- Cadence
- Clock

Push the function select switch, the display changes as follows:

Odometer → Trip meter → Average bicycle speed → Maximum bicycle speed → Range → Battery capacity (%) → Cadence → Clock → Odometer

You can select the items to be displayed. For more information, see "Stopwatch and settings".

You can reset the data for trip meter, average bicycle speed, and maximum bicycle speed.

For more information, see "Stopwatch and settings".









Odometer

This displays the total distance (in kilometers or miles) ridden while the power was on.

The odometer cannot be reset.

Trip meter

This displays the total riding distance (in kilometers or miles) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the trip meter and begin counting a new total, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the trip meter is displayed. Or see "Stopwatch and settings".

Average bicycle speed

This displays the average bicycle speed (in kilometers per hour or miles per hour) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the average bicycle speed, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the average bicycle speed is displayed. Or see "Stopwatch and settings".

Maximum bicycle speed

This displays the maximum bicycle speed (in kilometers per hour or miles per hour) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the maximum bicycle speed, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the maximum bicycle speed is displayed. Or see "Stopwatch and settings".



Range (Remaining assist distance)

This displays an estimate of the distance (in kilometers or miles) that can be ridden with assist on the residual battery capacity of the battery installed. If you switch the assist mode when the remaining assist distance is displayed, the estimate of the distance that can be ridden with assist changes.

The remaining assist distance estimate cannot be reset.

TIP

- The remaining assist distance changes depending on the riding situation (hills, headwind, etc.) and as the battery runs down.
- If in Off mode, "- - -" is displayed.



Battery capacity (%)

This displays the power remaining in the battery. The residual battery capacity display cannot be reset.



Cadence

This displays your pedaling speed in revolutions per minute.

The pedaling cadence display cannot be reset.



If you pedal in backward, "0" is displayed.




Clock

Displays the current time in 24 hour format. To adjust the time, see "Stopwatch and settings".


○ Headlight "On/Off" (Applies only to models equipped with a headlight powered by the battery pack. The taillight, which is powered by the battery pack, is switched on/off with the headlight.)

Each time you press the light switch, the headlight switches between "On" and "Off".



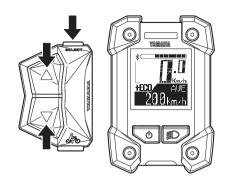

Main riding display

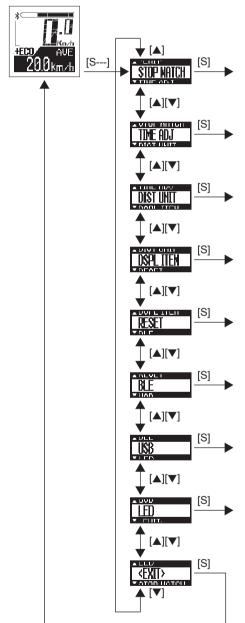

Stopwatch and settings

The display enables the following.

- STOPWATCH Stopwatch function
- TIME ADJ (TIME ADJUST) Clock setting
- DIST UNIT (DISTANCE UNIT) km/mile setting
- DSPL ITEM (DISPLAY ITEM)
 Sets the items to be displayed in the function display during normal riding.
- RESET

Resets the values of the trip meter, average bicycle speed, and maximum bicycle speed.

- BLE (Bluetooth low energy technology)
 Switches the profiles and turns off the wireless function.
- USB
 Switches the USB receptacle between a power supply port and a wired communication port.
- LED
 Changes between lighting the assist mode lamp and keeping the assist mode lamp unlit.
- 1. Press the function select switch for 2 seconds or longer.
- 2. Select an item by using the assist mode switches (up & down).

Press the function select switch at the displayed item that you want to select, and the selected item will then be displayed.


Selecting "EXIT" returns to the main riding display.

WARNING

For all setting procedures, be sure to stop the bicycle and perform the required settings in a safe location. Otherwise, lack of attention to surrounding traffic or other hazards could cause an accident.

TIP_

- · The settings cannot be adjusted while riding.
- If you do the following during setting, the item that you are setting will be canceled and the display will return to the main riding display.
 - Turning the crank (pedal) in the traveling direction
 - Turning the rear wheel at 2 km/h and more
 - Pushing the pushing assist switch
- [S---] ···· Press the function select switch for 2 seconds or longer
- [S] Press the function select switch
- [A] ····· Press the assist mode switch (up)
- [▼] ····· Press the assist mode switch (down)

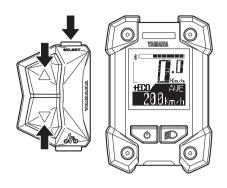

STOPWATCH

The stopwatch counts time in seconds up to a maximum of 9 hours 59 minutes 59 seconds.

If this maximum is reached, it will automatically start over from 0 (zero) and continue counting.

TIME MEASUREMENT

Use the function select switch to start and stop time measurement.

Press the function select switch for 2 seconds or longer to "RESET" the measured time.

RESET

When the function select switch is pressed, the measured time will be reset and the measuring display will be shown.

Use the assist mode switches (up & down) to go to the "EXIT" display.


• FXIT


When the function select switch is pressed, the display will return to the main riding display.

Use the assist mode switches (up & down) to go to the "RESET" display.

TIP_

- It is possible to return to the main riding display without interrupting time measurement.
- When the power is turned off, the measured time will be reset.

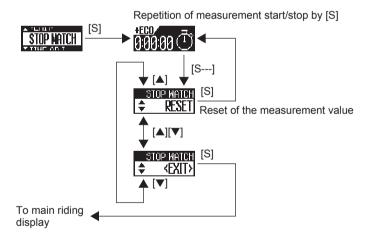


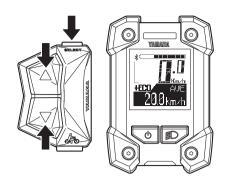


• TIME ADJ (TIME ADJUST)

You can adjust the time of the clock.

- 1. Check that the "Hour" is flashing and adjust the hour by using the assist mode switches (up & down).
- 2. Press the function select switch to adjust the minutes.
- 3. Check that the "Minute" is flashing and adjust the minutes by using the assist mode switches (up & down).
- 4. Press the function select switch to return to the main riding display.

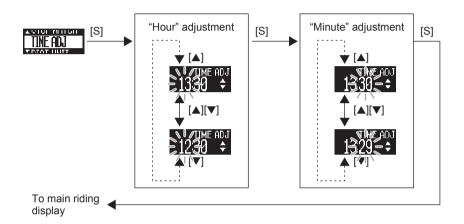

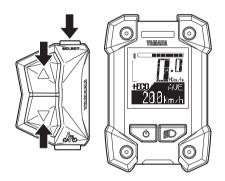



• DIST UNIT (DISTANCE UNIT)

You can select the display units for distance and speed. When "km" is selected, the traveled distance will be indicated in kilometers and the speed in km/h.

When "mile" is selected, the traveled distance will be indicated in miles and the speed in mph.

- 1. Select "km" or "mile" by using the assist mode switches (up & down).
- 2. Press the function select switch when the desired unit is indicated in the display. This setting will then be kept and the display will return to the main riding display.

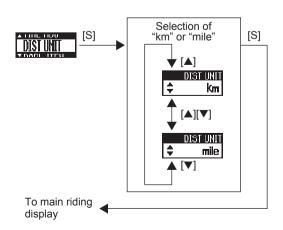

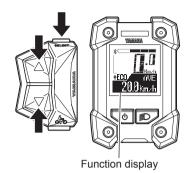

DSPL ITEM (DISPLAY ITEM)


You can select to show or hide different items in the function display during normal riding.


The items which you can select to show or hide are: TRIP (trip meter), AVE (average bicycle speed), MAX (maximum bicycle speed), RANGE (remaining assist distance), BATTERY (battery capacity (%)), CADENCE (cadence), and TIME (clock).

TIP_

You cannot hide the odometer indication.

- Select an item by using the assist mode switches (up & down).
- 2. Use the function select switch to show or hide the selected item. (When an item is shown, a check mark will be shown in the check box.)
- 3. When you press the function select switch in the "EXIT" display, the setting will be kept and the display will return to the main riding display.

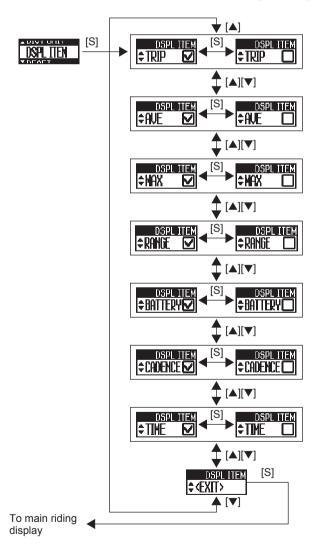

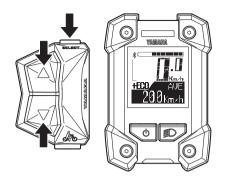



RESET

You can reset the TRIP (trip meter), AVE (average bicycle speed), and MAX (maximum bicycle speed) values.

TIP

- · You cannot reset the odometer.
- To reset the accumulated energy that is displayed on the device connected via the Bluetooth low energy technology, select "CPP" on the "BLE" (Bluetooth low energy technology) display. "CALORIE" will be added in the "RESET" display. Then, select "CALORIE" to reset the accumulated energy.
- Select an item by using the assist mode switches (up & down) and use the function select switch to place a check mark in the check box for the item that you want to reset.
- 2. When you press the function select switch in the "EXIT" display, the items with check marks will be reset and the display will return to the main riding display.

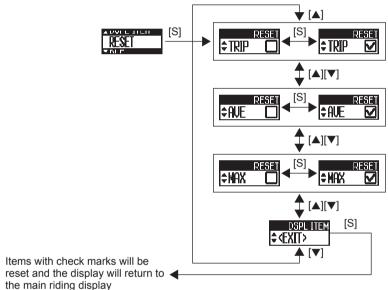

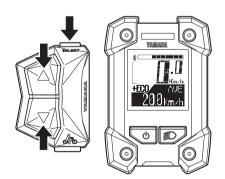

BLE (Bluetooth low energy technology)

You can set the profile to use the wireless function with Bluetooth low energy technology, or you can select not to use the wireless function.

When "CSCP" is selected, the Cycling Speed and Cadence Profile will be available.


When "CPP" is selected, the Cycling Power Profile will be available.


When "OFF" is selected, the wireless function will be inactive.

TIP

- Set the profile according to the wireless communication equipment that communicates via Bluetooth low energy technology.
- For the output power level of each profile, see "Specifications".
- Even if the power is turned off, the setting will be kept. When the power is turned on the next time, the last used setting will be selected.

- 1. Select "CSCP", "CPP", or "OFF" by using the assist mode switches (up & down).
- 2. When you press the function select switch at the desired item display, the setting will be kept and the main riding display will be shown.

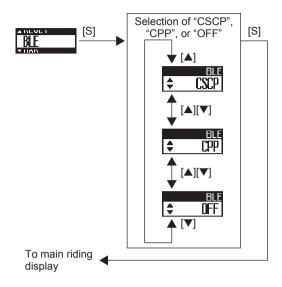

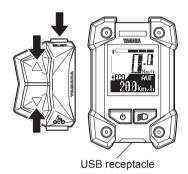



USB

You can use the USB receptacle as a power supply.

TIP_

- Normally you should not use "COMM" because this is a service mode used for wired communication.
- When the power is turned off, the mode automatically changes to "PWR SPLY".

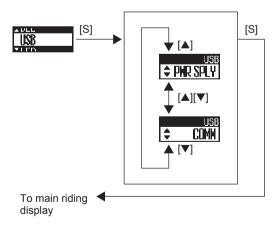

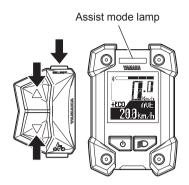

• LED

You can select to light up the assist mode lamp according to the assist mode or keep the assist mode lamp unlit all the time.


When "ON" is selected, the assist mode lamp will light up according to the assist mode.

When "OFF" is selected, the assist mode lamp will remain unlit all the time.

TIP

Even if the assist mode lamp is set to "OFF", it will light up in red if an error occurs.

- 1. Select "ON" or "OFF" by using the assist mode switches (up & down).
- 2. When you press the function select switch at the desired item display, the setting will be kept and the main riding display will be shown.

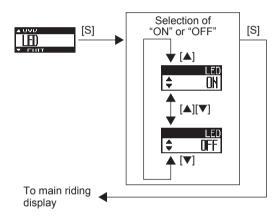



O Pushing assist 🚴

When you are on or off the bicycle and start moving it, you can use pushing assist without pedaling the bicycle.


To use pushing assist, press and hold the pushing assist switch.

Pushing assist will not work in the following situations:

- When you release the pushing assist switch.
- If you press another switch at the same time.
- · When you start to pedal.
- If your bicycle speed exceeds 6 km/h.
- · If you select Off mode.
- If the wheels are not turning (when braking or coming into contact with an obstacle, etc.).

TIP

The maximum speed will vary depending on the selected gear. The maximum speed will become slower in a lower gear.

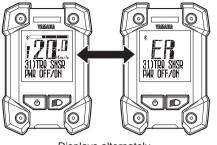

Displays alternately

○ Diagnosis mode


The e-Bike Systems are equipped with a diagnosis mode. If a malfunction or fault occurs in the e-Bike Systems, the assist mode lamp will light up in red, and the main riding display and "ER" will be shown alternately, while an error description will inform you of the type of error in the function display. See "Troubleshooting" regarding symptoms and remedies for abnormal displays and abnormal flashing.

WARNING

If the problem cannot be solved, have your bicycle inspected by a dealer as soon as possible.

TIP

Even if the assist mode lamp is set to "OFF", it will light up in red if a malfunction or fault occurs.



Power can be supplied to most external devices (e.g. various smart phones etc.) by connecting a commercial USB 2.0 OTG cable.

[To supply power]

- 1. Open the USB receptacle cap of the display.
- 2. Connect the USB cable to the display and external device.
- 3. Turn on the power of the vehicle.


[To stop the power supply]

- 1. Turn off the power of the vehicle.
- 2. Disconnect the USB cable and put on the cap of the USB receptacle.

NOTICE

- · Do not apply unreasonable force on the USB plug or pull the USB cable.
- · Check that the USB plug is facing the right way and not totally out-of-position with the USB receptacle or slanted, and make sure it is fully inserted all the way in.
- Do not connect the USB receptacle and the USB plug in a wet state.
- Use a USB 2.0 OTG cable that conforms to the standards.
- · Do not insert foreign objects into the USB receptacle unit.

Otherwise the display unit and external device may malfunction.

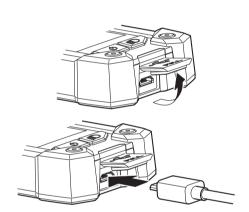

TIP __

- Power is supplied automatically when an external device is connected with the USB cable.
- No power is supplied if the remaining capacity of the battery pack is low.
- The power supply of the vehicle will go off and power supplied by the USB connection will also stop if the vehicle is not operated for 5 minutes.



The wireless equipment corresponding to the CSCP or CPP profiles can provide the communication via Bluetooth low energy technology.


- 1. Set the profiles of the display unit by referring to "Stopwatch and settings".
 - Also confirm that they are in accordance with the connection settings of your wireless communication equipment
- 2. Check that the Bluetooth indicator is displayed.
- 3. Select "Yamaha ####*" or "Yamaha ######*" from the user menu of your wireless communication equipment.

For more information, see the instruction manual of the wireless communication equipment.


* "####" or "######" is a combination of irregular alphanumeric characters.


TIP

- Keep the distance between the display and wireless communication equipment within 1 m. The maximum communication distance of this equipment is 1 m.
 If the wireless communication equipment is kept in a bag, etc., the actual communication distance might be shorter.
- Do not use the equipment in places with magnetic fields, static electricity, or electromagnetic interference. If the equipment is used near transmitters, broadcasting stations or the following type of equipment, wireless communication may not be possible.
 - Microwave ovens
 - · Digital cordless phones
 - · Wireless communication devices
 - Near other wireless equipment using the 2.4 GHz band.
- Do not cover the display with objects such as aluminum sheets that block the radio waves. Otherwise, wireless communication may not be possible.
- For the output power level of each profile, see the "Specifications".

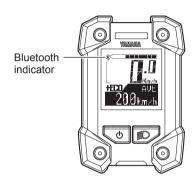

Display unit (Display C)

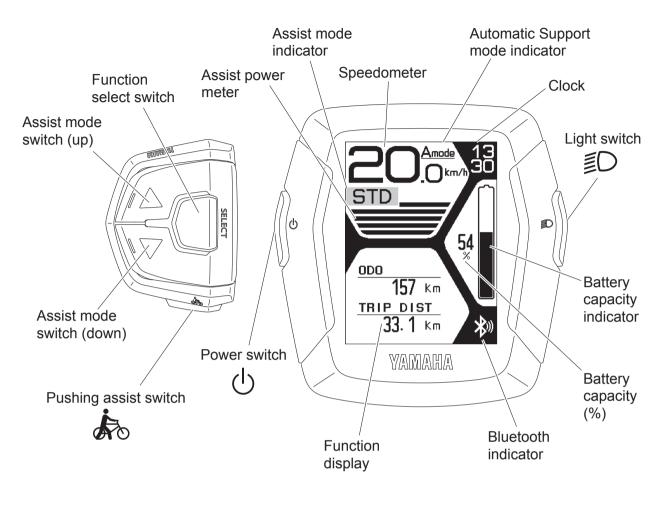


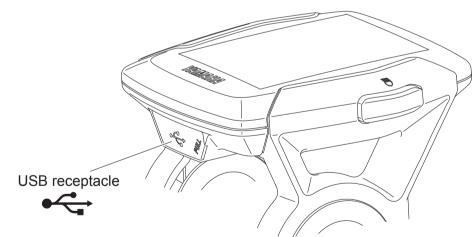



Display unit (Display C)

The display unit offers the following operations and information displays.

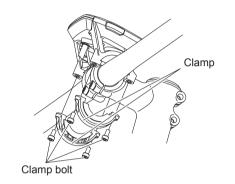


○ Installing the battery

The display unit needs to be removed and installed for changing the battery.

- Remove the clamp by loosening the four bolts and remove the display from the handle.
- When installing the display unit, tighten the four clamp bolts from the back side of the clamp.

⚠ WARNING

Tighten the clamp bolts to 2 N·m. Otherwise, during riding, vibration could cause the clamp bolts to come loose with the risk that the display unit may fall off. A loose display could distract the rider or interfere with control.

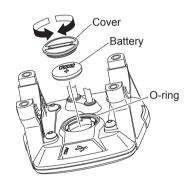

○ Battery


Check if the rated battery (CR2032) is installed in the rear of the display unit.

If a battery is not installed, or if there is not sufficient battery power remaining, install a new battery.

To adjust the time, see "Settings".

TIP_

- Make sure that the O-ring is installed correctly.
- Use a new CR2032 button cell battery (sold separately).
- When a battery is drained, whenever it turns on the vehicle power supply, the clock begins to count from 11:00. Please replace the battery, if such a condition appears.

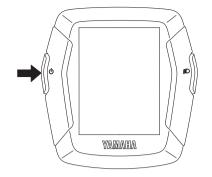

O Power "On/Off" ()


Each time you press the power switch, the power is turned "On" and "Off".

When you turn on the power, the animation will be displayed.

After that, it transitions to the main riding display.

TIP_

- When you turn on the power, the assist mode is Automatically set to Standard mode or Automatic Support mode.
- Keep your feet off the pedals when turning on the display unit. Also, do not start riding immediately after turning on the display unit. Doing so could weaken the assist power. (Weak assist power in either of these cases is not a malfunction.) If you did either of the above by accident, remove your feet from the pedals, turn on the power again, and wait a moment (approximately two seconds) before starting to ride.

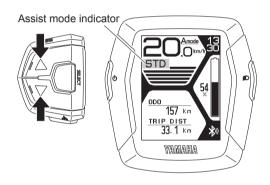

O Displaying and switching the assist mode


You can select the assist mode by using the assist mode switches (up & down).


The selected assist mode is displayed by the assist mode indicator.

- When you press the assist mode switch (up), the mode changes from "OFF" to "+ECO", or from "+ECO" to "ECO", or "ECO" to "STD", or "STD" to "HIGH", or "HIGH" to "EXPW".
- When you press the assist mode switch (down), the mode changes from "EXPW" to "HIGH", or from "HIGH" to "STD", or "STD" to "ECO", or "ECO" to "+ECO", or "+ECO" to "OFF".



- Bicycles equipped with the PWseries TE or PWseries ST drive unit have no Extra Power mode.
- Further pressing of the assist mode switch will not cycle the assist mode selections.
- In the Off mode, the assist power meter is not displayed.

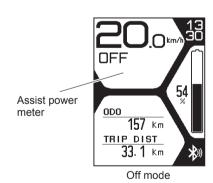

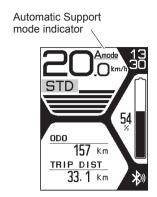


The Automatic Support mode, which enables automatic change to the optimal assist mode according to the riding conditions, can also be used.


- To use the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. The Automatic Support mode indicator will light up and the mode will be changed to the Automatic Support mode.
- To cancel the Automatic Support mode, press the assist mode switch (up) for 1 second or longer. The Automatic Support mode indicator will go off and the Automatic Support mode will be canceled.

TIP


- Even if you press the assist mode switches (up & down) while in Automatic Support mode, the assist mode cannot be changed.
- The Automatic Support mode is saved when the power is turned off. When you turn on the power again, the assist mode will be in the Automatic Support mode.

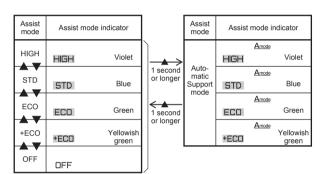


PWseries TE drive unit

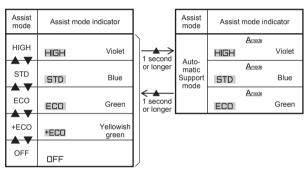

PWseries ST drive unit

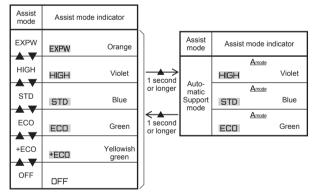

PW-X2 drive unit

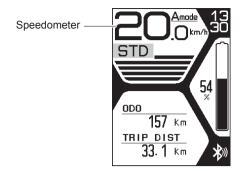


○ Speedometer

The speedometer displays your bicycle speed (in kilometer per hour or mile per hour). To select the km/mile, see "Settings".


TIP _

If your bicycle speed is less than 2.0 km/h or 1.2 MPH, the speedometer displays "0.0 km/h" or "0.0 MPH".

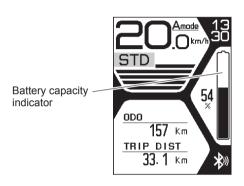

○ Battery capacity indicator


The battery capacity indicator displays an estimate of how much capacity is left in the battery.

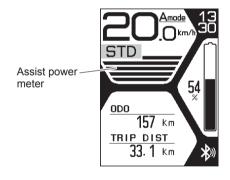

○ Assist power meter

The assist power meter displays an estimate of the assist power during riding.

When the e-Bike Systems are not in operation, none of the segments of the assist power meter are displayed. When the e-Bike Systems are operating, as the assist power increases, the segments of the assist power meter are added one by one.

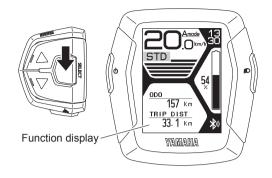

○ Function display

The function display can display the following functions.

- Odometer
- Trip meter
- Average bicycle speed
- · Maximum bicycle speed
- Range (Remaining assist distance)
- Cadence
- Trip time

Push the function select switch, the display changes as follows:

Odometer → Trip meter → Average bicycle speed → Maximum bicycle speed → Range → Cadence → Trip time → Odometer

You can select the items to be displayed.

For more information, see "Settings".

You can reset the data for trip meter, trip time, average bicycle speed, and maximum bicycle speed.

For more information, see "Settings".

TIP __

When you connect to the smartphone and run the application, the Trip meter, Trip time, Average bicycle speed, and Maximum bicycle speed will all be reset.

Odometer

This displays the total distance (in kilometers or miles) ridden while the power was on.

The odometer cannot be reset.

• Trip meter

This displays the total riding distance (in kilometers or miles) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the trip meter and begin counting a new total, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the trip meter is displayed on the upper row of the function display. Or see "Settings".

TRIP DIST 33.1 km

AVE			
	7.	7	km/h

MAX

3.7 km/h

RANGE 15 Km

CADENCE FOR

Average bicycle speed

This displays the average bicycle speed (in kilometers per hour or miles per hour) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the average bicycle speed, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the average bicycle speed is displayed on the upper row of the function display. Or see "Settings".

Maximum bicycle speed

This displays the maximum bicycle speed (in kilometers per hour or miles per hour) since it was last reset.

When you turn off the power, the data up to that point will be saved.

To reset the maximum bicycle speed, press the assist mode switch (up) and assist mode switch (down) simultaneously for 2 seconds or longer when the maximum bicycle speed is displayed on the upper row of the function display. Or see "Settings".

Range (Remaining assist distance)

This displays an estimate of the distance (in kilometers or miles) that can be ridden with assist on the residual battery capacity of the battery installed. If you switch the assist mode when the remaining assist distance is displayed, the estimate of the distance that can be ridden with assist changes.

The remaining assist distance estimate cannot be reset.

TIP_

- The remaining assist distance changes depending on the riding situation (hills, headwind, etc.) and as the battery runs down.
- If in Off mode, "- - -" is displayed.

Cadence

This displays your pedaling speed in revolutions per minute.

The pedaling cadence display cannot be reset.

TIP	
If you pedal in backward, "0" is displayed.	

1: 47: 35

Trip time

This displays the total riding time since it was last reset. When you turn off the power, the data up to that point will be saved.

For the procedure to reset the trip time, see "Settings".



If your bicycle speed is less than 2.0 km/h or 1.2 MPH, the trip time will not be accumulated.

○ Headlight "On/Off" (Applies only to models equipped with a headlight powered by the battery pack. The taillight, which is powered by the battery pack, is switched on/off with the headlight.)


Each time you press the light switch, the headlight switches between "On" and "Off".

TIP_

- Display backlight will operates simultaneously with the light switch.
- When the light switch is "On", the brightness will be low. When the light switch is "Off", the brightness will be the selected condition. For the procedure of selecting the brightness condition, see "Settings".





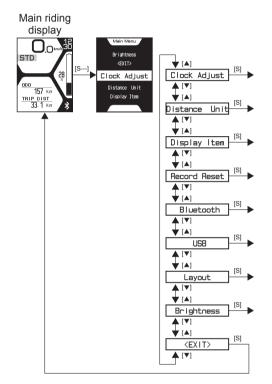

Settings

The display enables the following.

- Clock Adjust Clock setting
- Distance Unit km/mile setting
- Display Item
 Sets the items to be displayed in the function display during normal riding.
- Record Reset
 Resets the values of the trip meter, average bicycle
 speed, maximum bicycle speed, and trip time.
- Bluetooth (Bluetooth low energy technology)
 Switches the profiles and turns off the wireless function.
- USB
 Switches the USB receptacle between a power supply port and a wired communication port.
- Layout Switches the layout of the display.
- Brightness
 Changes the brightness of the display backlight.
- 1. Press the function select switch for 2 seconds or longer.
- 2. Select an item by using the assist mode switches (up & down).


When you select an item to set and press the function select switch, the setting will be displayed. Selecting "EXIT" returns to the main riding display.

MARNING

For all setting procedures, be sure to stop the bicycle and perform the required settings in a safe location. Otherwise, lack of attention to surrounding traffic or other hazards could cause an accident.

TIP


- The settings cannot be adjusted while riding.
- If you do the following during setting, the item that you are setting will be canceled and the display will return to the main riding display.
 - Turning the crank (pedal) in the traveling direction
 - Turning the rear wheel at 2 km/h and more
 - Pushing the pushing assist switch
- [S---] ···· Press the function select switch for 2 seconds or longer
- [S] · · · · · Press the function select switch
- [A] ····· Press the assist mode switch (up)
- [▼] ····· Press the assist mode switch (down)

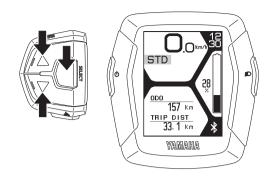

Clock Adjust

You can adjust the time of the clock.

- 1. Check that the "Hour" is flashing and adjust the hour by using the assist mode switches (up & down).
- 2. Press the function select switch to adjust the minutes.
- 3. Check that the "Minute" is flashing and adjust the minutes by using the assist mode switches (up & down).
- 4. Press the function select switch to return to the main menu display.

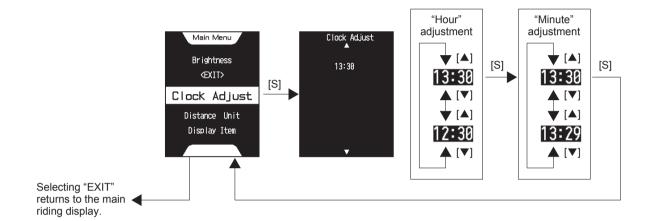





Distance Unit

You can select the display units for distance and speed. When "km" is selected, the traveled distance will be indicated in kilometers and the speed in km/h.

When "mile" is selected, the traveled distance will be indicated in miles and the speed in mph.

- 1. Select "km" or "mile" by using the assist mode switches (up & down).
- 2. When you press the function select switch, the setting will then be kept and the display will return to the main menu display.

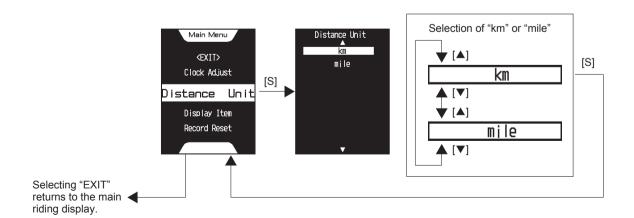

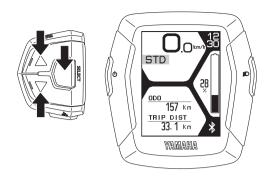

Display Item


You can select to show or hide different items in the function display during normal riding.


The items which you can select to show or hide are: Trip Distance (Trip meter), Average Speed (Average bicycle speed), Maximum Speed (Maximum bicycle speed), Battery Range (Range), Cadence, and Trip Time.

TIP_

You cannot hide the odometer indication.

- 1. Select an item by using the assist mode switches (up & down).
- 2. Use the function select switch to show or hide the selected item. (When an item is shown, a check mark will be shown in the check box.)
- 3. When you select "EXIT" and press the function select switch, the setting will be kept and the display will return to the main menu display.

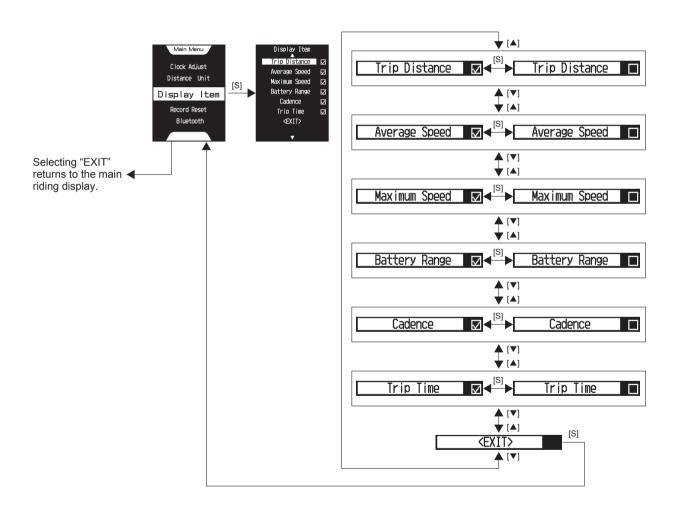

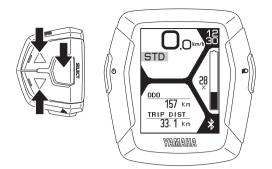


Record Reset

You can reset the Trip Distance (Trip meter), Average Speed (Average bicycle speed), Maximum Speed (Maximum bicycle speed), and Trip Time values.

TIP

- · You cannot reset the odometer.
- To reset the accumulated energy that is displayed on the device connected via the Bluetooth low energy technology, select either "CPP" or "YEP1.0" on the "Bluetooth" (Bluetooth low energy technology) display. "Total Calorie" will be added in the "Record Reset" display. Then, select "Total Calorie" to reset the accumulated energy.
- Select an item by using the assist mode switches (up & down) and use the function select switch to place a check mark in the check box for the item that you want to reset.
- 2. When you select "EXIT" and press the function select switch, the items with check marks will be reset and the display will return to the main menu display.

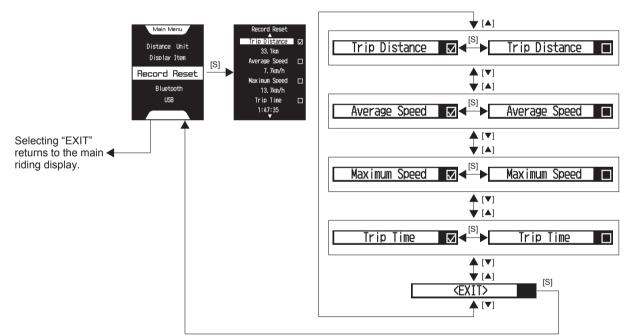

Items with check marks will be reset



Bluetooth (Bluetooth low energy technology)

You can set the profile to use the wireless function with Bluetooth low energy technology, or you can select not to use the wireless function.

When "Off" is selected, the wireless function will be inactive.


When "CSCP" is selected, the Cycling Speed and Cadence Profile will be available.


When "CPP" is selected, the Cycling Power Profile will be available.

When "YEP1.0" is selected, the e-Bike profile preset by YAMAHA MOTOR CO., LTD. will be available.

TIP.

- Set the profile according to the wireless communication equipment that communicates via Bluetooth low energy technology.
- For the output power level of each profile, see "Specifications".
- Even if the power is turned off, the setting will be kept. When the power is turned on the next time, the last used setting will be selected.
- 1. Select "Off", "CSCP", "CPP", or "YEP1.0" by using the assist mode switches (up & down).
- 2. When you press the function select switch, the setting will then be kept and the display will return to the main menu display.

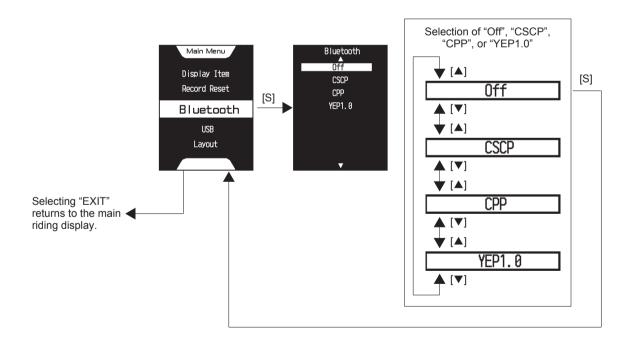

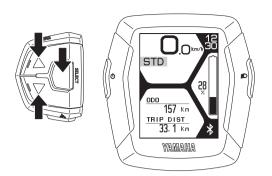


USB

You can use the USB receptacle as a power supply.

TIP

- Normally you should not use "COMM" because this is a service mode used for wired communication.
- When the power is turned off, the mode automatically changes to "Power Supply".

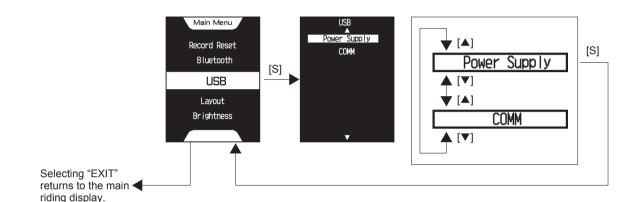





Layout

You can select the layout for the main riding display.

When you select "Default", the main riding display will be shown.


When you select "Compass", mainly navigation information will be displayed once the unit has been paired with the smartphone application.

When you select "Fitness", mainly fitness information will be displayed once the unit has been paired with the smartphone application.

TIP_

- To display the correct information on the "Compass" and "Fitness" displays, be sure to use the Bluetooth low energy technology communication and the YEP1.0 profile in order to make the display unit and the smartphone application work properly together.
- When the display unit and smartphone application are properly paired, the Compass function and Fitness function will start on the application side, and the display will automatically change.
- When the power is turned off, the mode automatically changes to "Default".
- 1. Select "Default", "Compass", or "Fitness" by the assist mode switches (up & down).

2. Press the function select switch when the desired unit is indicated in the display. This setting will then be kept and the display will return to the main riding display.

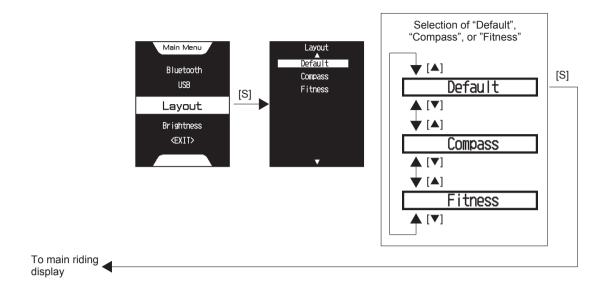





Brightness


You can select the brightness of the display backlight. When "Low" is selected, the brightness will be low always. When "Headlight Sync" is selected, the brightness will be high while the light switch is "Off", and it will become low if the light switch is turned "On".

When "High" is selected, the brightness will be high always.

- 1. Select "Low", "Headlight Sync", or "High" by using the assist mode switches (up & down).
- When you press the function select switch, the setting will then be kept and the display will return to the main menu display.

TIP_

Even if the power is turned off, the setting will be kept. When the power is turned on the next time, the last used setting will be selected.

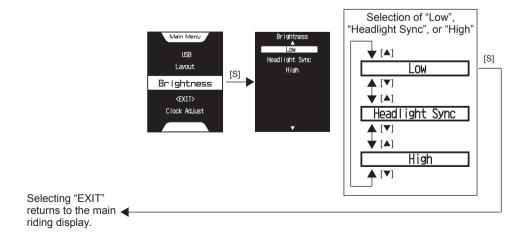





O Pushing assist 🛵

When you are on or off the bicycle and start moving it, you can use pushing assist without pedaling the bicycle.

To use pushing assist, press and hold the pushing assist switch.

Pushing assist will not work in the following situations:

- When you release the pushing assist switch.
- If you press another switch at the same time.
- When you start to pedal.
- If your bicycle speed exceeds 6 km/h.
- · If you select Off mode.
- · If the wheels are not turning (when braking or coming into contact with an obstacle, etc.).

TIP_

The maximum speed will vary depending on the selected gear. The maximum speed will become slower in a lower gear.


O Diagnosis mode

The e-Bike Systems are equipped with a diagnosis mode. If a malfunction or fault occurs in the e-Bike Systems, an error message will be displayed. For the symptoms and actions, see "Troubleshooting".



If the problem cannot be solved, have your bicycle inspected by a dealer as soon as possible.



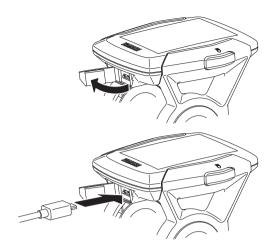

○ Power supply to external devices

Power can be supplied to most external devices (e.g. various smart phones etc.) by connecting a commercial USB 2.0 OTG cable.

[To supply power]

- 1. Open the USB receptacle cap of the display.
- 2. Connect the USB cable to the display and external device.
- 3. Turn on the power of the vehicle.

[To stop the power supply]

- 1. Turn off the power of the vehicle.
- 2. Disconnect the USB cable and put on the cap of the USB receptacle.


NOTICE

- Do not apply unreasonable force on the USB plug or pull the USB cable.
- Check that the USB plug is facing the right way and not totally out-of-position with the USB receptacle or slanted, and make sure it is fully inserted all the way in.
- Do not connect the USB receptacle and the USB plug in a wet state.
- Use a USB 2.0 OTG cable that conforms to the standards.
- Do not insert foreign objects into the USB receptacle unit

Otherwise the display unit and external device may malfunction.

TIP _

- Power is supplied automatically when an external device is connected with the USB cable.
- No power is supplied if the remaining capacity of the battery pack is low.
- The power supply of the vehicle will go off and power supplied by the USB connection will also stop if the vehicle is not operated for 5 minutes.

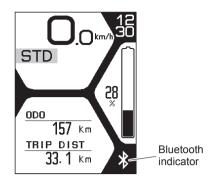





Communication with Bluetooth low energy technology

The wireless equipment corresponding to the CSCP, CPP, or YEP1.0 profiles can provide the communication via Bluetooth low energy technology.

- 1. Set the profiles of the display unit by referring to "Settings".
 - Also confirm that they are in accordance with the connection settings of your wireless communication equipment.
- 2. Check that the Bluetooth indicator is displayed.
- 3. Select "Yamaha ####*" or "Yamaha ######*" from the user menu of your wireless communication equipment.

For more information, see the instruction manual of the wireless communication equipment.

- * "####" or "######" is a combination of irregular alphanumeric characters.
- 4. Make sure that the Bluetooth indicator displays successful pairing.

TIP

- Keep the distance between the display and wireless communication equipment within 1 m. The maximum communication distance of this equipment is 1 m.
 If the wireless communication equipment is kept in a bag, etc., the actual communication distance might be shorter.
- Do not use the equipment in places with magnetic fields, static electricity, or electromagnetic interference. If the equipment is used near transmitters, broadcasting stations or the following type of equipment, wireless communication may not be possible.
 - · Microwave ovens
 - · Digital cordless phones
 - · Wireless communication devices
 - Near other wireless equipment using the 2.4 GHz hand
- Do not cover the display with objects such as aluminum sheets that block the radio waves. Otherwise, wireless communication may not be possible.
- For the output power level of each profile, see the "Specifications".

O Display of paired application

By using the Bluetooth low energy technology communication and YEP1.0 profile and then pairing the display unit with the smartphone application, navigation information (Compass) and fitness support (Fitness) will be available on the display.

WARNING

Do not look at the display while bicycling since lack of attention to surrounding traffic can cause an accident.

TIP.

In this manual, all information that can be shown on the display unit, is described. However, some information may not be correctly shown owing to the smartphone application.

Compass (Navigation information)


Sets the destination or waypoints by using the smartphone application and shows this information on the display.


You can select the information to be displayed. Push the function select switch to change the displayed information.

• Turn-by-turn

The upper part shows the distance to the next turn on the traveling route to reach the destination.

The lower part shows relevant information (such as a street name, crossing name, or place name) transmitted from the application. The displayed information depends on the application.

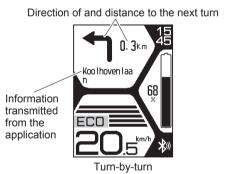




· Estimated time

The remaining distance to the destination is shown at the top.

The estimated time of arrival at the destination is shown under this.



Direction and straight-line distance to waypoint or destination

21km 45 68 8 8 North up


Estimated battery

Displays the estimated remaining battery capacity when you arrive at the destination.

North up


The upper part displays the heading to the destination and straight-line distance when the compass direction of the display unit has been fixed to north. It displays the heading to the next waypoint and straight-line distance in case waypoints have been set.



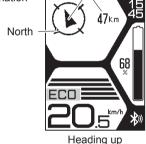

· Heading up

The upper part displays the direction and straight-line distance to the destination in relation to the current traveling direction and compass direction. It displays the direction and straight-line distance to the next waypoint in relation to the compass direction in case waypoints have been set.



Trip distance/time

The upper part displays the distance traveled since the smartphone application started the navigation. The lower part displays the elapsed time since the smartphone application started the navigation.



Be sure to obey local traffic regulations and ride according to the actual road conditions. Otherwise, you could cause a traffic accident.

TIP

- When the Turn-by-turn function of the smartphone application starts, only the Turn-by-turn display will be shown. Even if the function select switch is pressed, the display will not change.
- When the Compass function of the smartphone application starts, you can switch the display mode among North up, Heading up, and Trip distance/time by pressing the function select switch. However, you cannot change to any other display modes.
- The displayed contents of the navigation information depends on the smartphone application.
- The estimated remaining battery capacity varies according to the riding mode.

Fitness (Fitness-support information)

Set the target riding distance, target riding time, calorie burn target, etc. using the smartphone application and show this information on the display.

You can select the information to be displayed.

Push the function select switch, the display changes.

Calorie/Power


The upper part displays the calorie burn target value together with the accumulated burned calories over time since the application started the Fitness function. In addition, the number of burned calories for the current ride is displayed by a bar graph.


The lower part displays the target pedal power value and current pedal power. The current pedal power is displayed by a bar graph.



The upper part displays the target heart rate together with the current heart rate as beats per minute. In addition, the current heart rate is displayed by a bar graph.

The lower part displays the target cadence value together with the current cadence value as revolutions per minute. In addition, the current cadence value is displayed by a bar graph.





Heart rate/Cadence



Workout distance/time

The upper part displays the target distance traveled value together with the accumulated distance traveled over time since the application started the Fitness function. In addition, the current distance traveled is displayed by a bar graph.


The lower part displays the target riding time value and accumulated riding time since the application started the Fitness function. In addition, the current riding time is displayed by a bar graph.


TIP_


- The number of burned calories and pedal power are measured by an original method developed by YAMAHA MOTOR CO., LTD. The figures are for reference and may differ from similar figures of other products.
- In order to display the heart rate, this information must be received from a commercially available heart rate sensor supporting the smartphone application and Bluetooth low energy technology communication specifications.


The accuracy of the displayed heart rate depends on the measuring accuracy of the heart rate sensor.

G. Battery pack and charging procedure

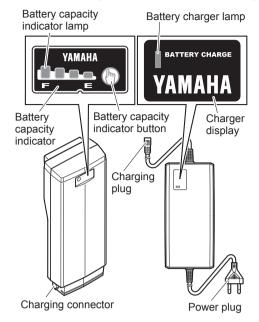

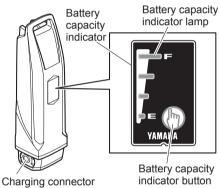

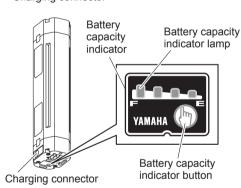

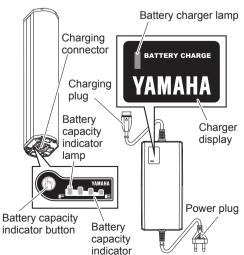

The battery pack equipped for the Yamaha e-Bike Systems is a lithium-ion battery. The lithium-ion battery is lightweight and offers superior capacity. However, it does have the following characteristics.

- Its performance decreases in extremely hot or cold environments.
- It naturally loses its charge.

The battery pack for the Yamaha e-Bike Systems also has an embedded computer which notifies you of estimated residual battery capacity and suspected faults via the battery capacity indicator lamp.

By pressing the battery capacity indicator button, you can display the residual battery capacity for approximately 5 seconds.

See "Checking the residual battery capacity" for the estimate of the residual battery capacity. See "Troubleshooting" for information on fault flashing.

⚠ WARNING

Do not use any other charger or charging method to recharge the special batteries. Using any other charger could result in fire, explosion, or damage the batteries.

WARNING

IMPORTANT SAFETY INSTRUCTIONS — SAVE THESE INSTRUCTIONS

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

This manual contains important safety and operating instructions for battery charger Type PASC5 and PASC6. Those types can be found in the labels on the products.

Before using battery charger, read all instructions and cautionary markings on battery charger, battery and product using battery.

Only use the battery charger type PASC5 to charge PASB2, PASB4, and PASB5 type batteries for Yamaha e-Bike Systems, while only using the battery charger type PASC6 to charge PASB6 type battery for Yamaha e-Bike Systems. Other types of batteries may burst causing injury to persons and damage.

NOTICE

Do not apply grease on the terminal of the battery.

Appropriate charging environments

For safe and efficient charging, charge the battery pack in a location that is:

- · Flat and stable
- · Free of rain or moisture
- · Out of direct sunlight
- · Well-ventilated and dry
- · Not accessible to children or pets
- Temperature between 15-25 °C


Inappropriate charging environments and solutions

The hot and cold environments described below can cause charging to enter standby or suspension without fully charging the battery.

- Summertime charging standby/suspension If charging in a location receiving direct summer sunlight or immediately after riding, the battery pack might enter charging standby (all four battery capacity indicator lamps flash slowly). See "Reading the charging status for battery pack". This is to automatically stop charging in order to protect the battery from exceeding the specified temperature while charging. You can avoid charging suspension by starting to charge with the battery cold or at a room temperature of 15–25 °C. If charging suspension occurs, move the battery pack to a cool location to reduce the charging standby time.
- Wintertime charging standby/suspension
 Charging standby will occur if the temperature is less than 0 °C. If charging is started and the temperature drops below this level due to late-night cooling or other factors, charging is suspended and standby mode is entered to protect the battery. In such cases, restart charging at an indoor location with a temperature of 15–25 °C.
- Noise on televisions/radios/computers
 Charging next to televisions, radios, or similar appliances might cause static, flickering images, and other interference. If this occurs, recharge in a location further away from the television or radio (such as in another room).


WARNING

If a charging fault occurs during charging, remove the power plug of the battery charger from the socket and wait for the battery pack/battery charger to cool.

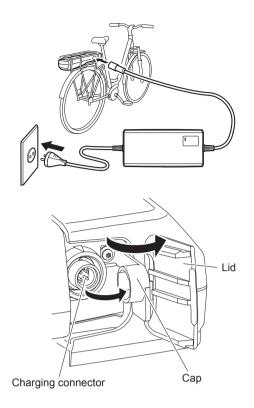

Charging the battery pack mounted on the bicycle (Rear carrier type)

- 1. Connect the power plug of the battery charger to a household power outlet.
- 2. Remove the lid of the battery holder cover and the cap of charging inlet from the charging connector on the battery pack, and connect it to the charging plug on the battery charger.

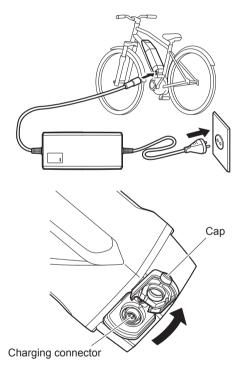

Charging the battery pack mounted on the bicycle (Down tube type)


- 1. Connect the power plug of the battery charger to a household power outlet.
- 2. Remove the cap of charging inlet from the charging connector on the battery pack, and connect it to the charging plug on the battery charger.

Charging the battery pack mounted on the bicycle (Multi location type)

- 1. Connect the power plug of the battery charger to a household power outlet.
- Remove the cap of charging inlet from the charging connector on the bicycle, and connect it to the charging plug on the battery charger. How to open the cap varies between bicycles.

NOTICE

- Do not connect the charging plug of the battery charger with the charging connector of the battery in a wet state.
 - Otherwise, the battery charger and battery pack may malfunction.
- Be sure to connect the charging plug only after the charging connector on the battery pack is completely dry.
 - Otherwise, the battery charger and battery pack may malfunction.
- Do not apply excessive force to the charging plug or pull on the cord with the charging plug connected ed to the battery.
 - Otherwise, the plug or connector may be damaged.
- Do not pedal while the charging plug is connected.
- 3. See "Reading the charging status for battery pack", and check that the battery charger is charging the battery pack.
- 4. The battery capacity indicator lamps will light up one by one until all four are on. Then, when charging is complete, all of the lamps will go off.
- 5. Confirm that charging is complete, and then disconnect the charging plug from the battery pack.
 - How to disconnect the plug of battery charger type PASC5 (see the left figure)
 - (1) Grasp the lock-release ring.
 - 2 Pull it out straight.
- 6. Place the cap of charging inlet on the battery pack's charging connector.

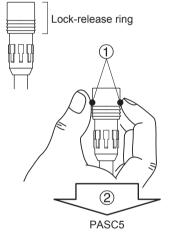



MARNING


Never handle the power plug, charging plug or touch the charger contacts with wet hands. This could result in electric shock.


TIP

- Charging will start automatically.
- If the display unit is turned on while the battery pack is charging, all normal displays will be shown, including the battery capacity indicator, but the assist system will not function.
- When the battery pack is connected to the battery charger, the battery capacity indicator lamp will flash at approximately 0.2 second intervals to indicate that the battery pack is being prepared to be charged. Leave it alone and charging will start normally.

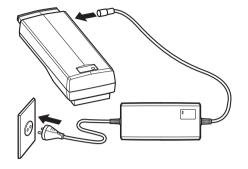

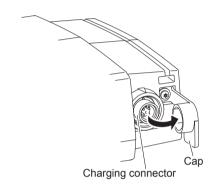

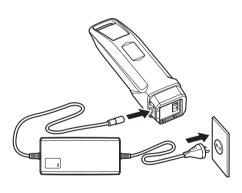

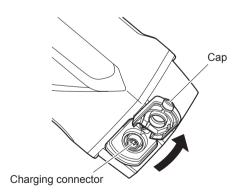

Charging the battery pack removed from the bicycle

- 1. Turn the display unit off.
- 2. Insert the key into the battery lock, and turn it to release the battery lock.
- 3. Remove the battery pack.

M WARNING

Use both hands when removing the battery pack. Do not drop the battery pack or subject it to impact. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.

TIP_


How to remove Multi location type battery packs varies between bicycles. For more information, see the instruction manual supplied with the bicycle.


- 4. Connect the power plug of the battery charger to a household power outlet.
- 5. Remove the cap from the charging connector on the battery pack, and connect it to the charging plug on the battery charger.


The Multi location type 500 Wh battery is not equipped with a cap.


NOTICE

- Do not connect the charging plug of the battery charger with the charging connector of the battery pack in a wet state.
 - Otherwise, the battery charger and battery pack may malfunction.
- Be sure to connect the charging plug only after the charging connector on the battery pack is completely dry.
 - Otherwise, the battery charger and battery pack may malfunction.
- Do not apply excessive force to the charging plug or pull on the cord with the charging plug connected ed to the battery pack.
 - Otherwise, the plug or connector may be damaged.

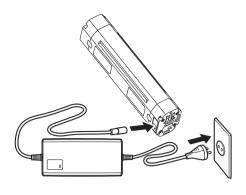

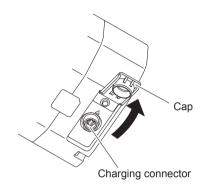

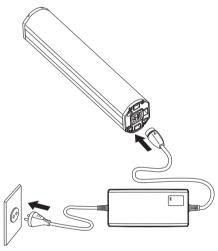

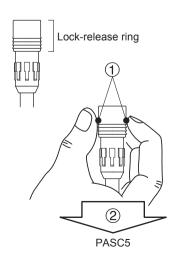


- 6. See "Reading the charging status for battery pack", and check that the battery charger is charging the battery pack.
- 7. The battery capacity indicator lamps will light up one by one until all four are on. Then, when charging is complete, all of the lamps will go off.
- 8. Confirm that charging is complete, and then disconnect the charging plug from the battery pack.

 How to disconnect the plug of battery charger type PASC5 (see the left figure)
 - 1 Grasp the lock-release ring.
 - 2 Pull it out straight.
- 9. Place the cap on the battery pack's charging connector

The Multi location type 500 Wh battery is not equipped with a cap.

⚠ WARNING

- Do not touch charger contacts with metallic objects. Do not allow foreign material to cause short circuit of the contacts. This could result in electric shock, fire, or damage the battery charger.
- Periodically remove dust from the power plug.
 Dampness or other issues could reduce the effectiveness of the insulation, resulting in fire.
- Never disassemble or modify the battery charger.
 This could result in fire or electric shock.
- Do not use with a power strip or extension cord.
 Using a power strip or similar methods may exceed rated current and can result in fire.
- Do not use with the cable tied or rolled up, and do not store with the cable wrapped around the charger main body. Cable damage can result in fire or electric shock.
- Firmly insert the power plug and the charging plug into the socket. Failure to insert the power plug and the charging plug completely can result in fire caused by electric shock or overheating.
- Do not use the battery charger near flammable material or gas. This could result in fire or explosion.
- Never cover the battery charger or place other objects on top of it while charging. This could result in internal overheating leading to fire.
- Before equipping the bicycle with a Multi location type 500 Wh battery pack, make sure that there is no foreign matter or water in the connector on the bicycle. Otherwise, it could lead to heat generation, smoke and/or a fire owing to short-circuiting of the terminals.






Battery pack mounting method (Rear carrier type)

The battery pack is installed from behind the rear carrier.


- Put the battery end on top of the guide.
- · Slide the battery in the direction of the arrow until hearing a click.

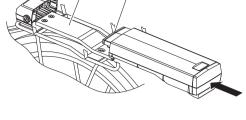



TIP ___

Battery pack mounting method (Down tube type)

- · Insert the battery in the direction of the arrow so that the battery bottom is aligned to the top of the case.
- Insert the upper part of the battery in the direction of the arrow so that the battery handle is aligned to the top of the battery lock.
- Press the upper part of the battery toward the frame until it clicks into place to secure it.

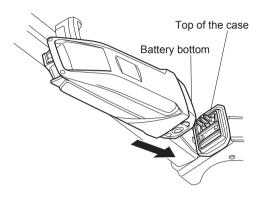

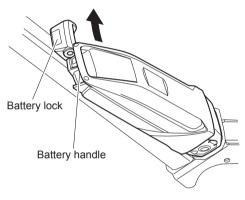

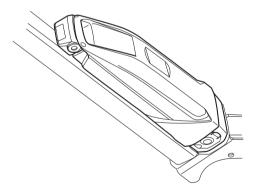

TIP ____

Battery pack mounting method (Multi location type) How to install Multi location type battery packs varies between bicycles. For more information, see the instruction manual supplied with the bicycle.

11. Make sure that it is securely attached by pulling the battery pack after installation.

⚠ WARNING

- Do not short the contacts of the battery pack. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.
- Do not disassemble or modify the battery pack. Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.
- Do not dispose of the battery pack in a fire or expose it to a heat source. Doing so could cause an explosion, resulting in serious injury or property damage.
- Do not drop the battery pack or subject it to impact.
 Doing so could cause the battery pack to become hot or catch fire, resulting in serious injury or property damage.

NOTICE

Make sure there is no foreign matter on the battery pack contacts before inserting the battery pack.

Reading the charging status for battery pack

Battery charger lamp	Battery capacity	indicator lamps	Current status	Details
	Lit power lamps indicate charging completed. A findicates current progre	lashing power lamp		
	(Rear carrier type)	(Down tube type)		
BATTERY CHARGE VAMAHA	YAMAHA F T E	P E VAMAHA	Charging	During charging, the battery capacity indicator lamps light
On	(Multi loca	tion type)		up one by one.
	YAMAHA P	YAMAHA YAMAHA		
	(Example: Battery is ap charged.)	proximately 50–75 %		
	(Rear carrier type)	(Down tube type)		
	YAMAHA F E	YAMAHA		When charging is complete, the charging lamp on the
	(Multi location type)		Charging completed	battery charger and
BATTERY CHARGE	YAMAHA (IV)	YAMAHA PARAMAHA PARAM	the battery capacity indicator lamp on the battery pack go off.	
YAMAHA	Off			Chamina will
Off	Four lamps flash simult (Rear carrier type)	(Down tube type)		Charging will automatically restart
	Pattery is in standby mode. * The battery internal	when a temperature is reached that allows charging. (See "Appropriate charging environments".)		
	(Multi loca	tion type)	temperature is too high or	When possible,
	YAMAHA YAMAHA	PO O O O O O O O O O O O O O O O O O O	too low.	always perform charging at the optimal temperature of 15–25 °C.

Reading the charging status for display unit (Applies only to models equipped with the Multi location type battery pack.)


To check the charge status, turn on the power of the display unit.

Battery charger lamp	Display unit	Current status	Details
BATTERY CHARGE YAMAHA On	(Display A) 0% 1-10% 11-99% <0.2 second <0.5 second intervals> (Display X) 11-99% <0.5 second intervals> (Display C) 0% 1-10% 11-99% <0.2 second intervals> 11-99% <0.2 second intervals> 11-99%	Onlarging	The battery capacity indicator slowly increases.

Battery charger lamp	Display unit	Current status	Details
	(Display A) All segments of the battery capacity indicator light up. (Display X) All segments of the battery capacity indicator light up. (Display C) All segments of the battery capacity indicator light up.	Charging completed	When charging is complete, all segments of the battery capacity indicator of the drive unit will go off and the battery charger lamp of the charger will go out.
VAMAHA Off	(Display X) All function display items are flashing. (Display X) All function display items are flashing. (Display C) All function display items are flashing.	Battery is in standby mode. * The battery internal temperature is too high or too low.	Charging will automatically restart when a temperature is reached that allows charging. (See "Appropriate charging environments".) When possible, always perform charging at the optimal temperature of 15–25 °C.

TIP_

For example, even if normal charging is started, if the battery temperature or the surrounding temperature is too high or too low, the charging may be extended or charging may be stopped without the battery being charged sufficiently in order to protect the battery.

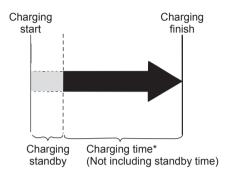

Charging time guidelines

Although charging time varies depending on residual battery capacity and external temperature, if the battery has been exhausted, this time is typically as indicated in the table below.

Battery pack	Charging time	
Rear carrier type 400 Wh	3.5 hours	
Down tube type 400 Wh		
Rear carrier type 500 Wh	4 hours	
Down tube type 500 Wh		
Multi location type 500 Wh		
Multi location type 600 Wh	5 hours	

If the battery pack enters standby mode while charging, charging time will increase by an equal amount.

* If charging after a long period of disuse, the charging time will be lengthened depending on the battery status. However, note that if the battery capacity indicator lamps do not flash in fault pattern (See "Reading the charging status for battery pack"), there is no malfunction.

H. Checking the residual battery capacity

You can check the estimate of how much capacity is left in the battery and to what extent it is charged. The check can be performed using either the display unit's residual battery capacity indicator or the battery's residual battery capacity indicator lamps.

TIP

- Even if the battery's capacity reaches 0 (zero), you can still ride the bicycle as a regular bicycle.
- If you are using an old battery pack, the residual battery capacity indicator may suddenly display very little power when you start moving. This is not a malfunction. Once riding stabilizes and the load is reduced, the proper value is displayed.

Residual battery capacity indicator display and estimate of residual battery capacity for display unit

The residual battery capacity can be displayed as a numerical value on the display unit.

Display of the residual battery capacity for the display unit	Display of the residual battery capacity	Applicable situation
(Display X) (Display C)	100–11 %	When you turn on the power of the display unit and ride continually after the battery is fully charged, the segments for the residual battery capacity indicator go out one by one each time the residual battery capacity is reduced by 10 %.

Display of the residual battery capacity for the display unit	Display of the residual battery capacity	Applicable situation
(Display A) <0.5 second intervals> (Display X) <0.5 second intervals> (Display C) <0.5 second intervals>	10–1 %	There is very little residual battery capacity left. Please charge the battery soon.
(Display A) <0.2 second intervals> (Display X) <0.2 second intervals> (Display C) <0.2 second intervals> 	0 %	There is no more residual battery capacity. Turn off the power for the display unit and charge the battery pack soon. * Assist is stopped, but you can still ride the bicycle as a regular bicycle.

Display of the battery capacity indicator lamps and the estimate of the residual battery capacity

When checking the residual battery capacity, push the battery capacity indicator button "(🍙".

Display of the battery ca	pacity indicator lamps	Estimate of the residual battery capacity	Applicable situation
(Rear carrier type)	(Down tube type)		
YAMAHA F E	YAMAHA	100–76 %	
(Multi loca	tion type)		
YAMAHA (TOTAL)	YAMAHA YAMAHA		
(Rear carrier type)	(Down tube type)		
YAMAHA F (Multi local	tion type)	75–51 %	From full charge (100 %), the battery capacity indicator lamps turn off, one by one.
YAMAHA (III)	YAMAHA VAMAHA		
(Rear carrier type)	(Down tube type)		
YAMAHA F (Multi local	tion type)	50–26 %	
YAMAHA (III)	YAMAHA YAMAHA E		

Display of the battery cap	acity indicator lamps	Estimate of the residual battery capacity	Applicable situation
(Rear carrier type) YAMAHA (Multi location YAMAHA (Multi location YAMAHA	(Down tube type) On type)	25–11 %	From full charge (100 %), the battery capacity indicator lamps turn off, one by one.
(Multi location Slow flash <0.5 second in	YAMAHA YAMAHA	10–1 %	There is very little battery capacity left.
(Rear carrier type) YAMAHA (Multi location YAMAHA Fast flash <0.2 second in	YAMAHA YAMAHA	0 %	The battery capacity has reached 0 (zero). Please charge the battery pack.

I. Pre-operation check

MARNING

Be sure to perform the inspection before riding the bicycle.

If there is anything you do not understand or find difficult, please consult a bicycle dealer.

NOTICE

- If you confirm there is a fault, have your bicycle inspected at a dealer as soon as possible
- The power assist mechanism consists of precision parts. Do not disassemble it.

Along with performing the regular inspection before riding the bicycle, also perform the following inspections.

No.	Inspection item	Inspection contents
1	Residual battery capacity	Is enough capacity left in the battery?
2	Installation status of the battery pack	Is it properly installed?
3	Operation of the e-Bike Systems	Do the e-Bike Systems operate when you begin moving?

J. Cleaning, maintenance and storage

MARNING

For bicycles equipped with a Multi location type 500 Wh battery pack, do not remove the battery pack from the bicycle when cleaning the bicycle. Otherwise, water could enter the connector and cause heat generation, smoke and/or a fire.

NOTICE

Do not use high-pressure washers or steam jet cleaners since they can cause water seepage, resulting in property damage or malfunction of the Drive Unit or display unit or battery pack. Should water get inside one of these units, have a bicycle dealer inspect your bicycle.

Caring for the battery pack

Use a moist, tightly-wrung towel to wipe off dirt on the battery pack. Do not pour water directly on the battery pack, such as with a hose.

NOTICE

Do not clean the contacts by polishing them with a file or using a wire, etc. Doing so could result in a fault.

Maintenance for the Drive Unit

NOTICE

Because a Drive Unit is a precision machinery, do not disassemble or exert any strong force on it (for example, do NOT hit this product with a hammer).

Especially since the crank axle is directly connected to the inside of the Drive Unit, any large damages inflicted on the crank axle may lead to failures.

Storage

Store the system in a place that is:

- · Flat and stable
- · Well ventilated and free from moisture
- · Sheltered from the elements and from direct sunlight

Long storage period (1 month or longer) and using it again after a long storage period

- When storing the bicycle for a long period (1 month or longer), remove the battery pack and store it using the following procedure.
- Decrease the residual battery capacity to where one or two battery capacity indicator lamps are lit, and store it indoors in a cool 15–25 °C, dry place.
- Check the residual battery capacity once a month, and if only one battery capacity indicator lamp is flashing, charge the battery pack for about 10 minutes. Do not let the residual battery capacity become too low.

TIP ___

- If you leave the battery pack at "full charge" or "empty", it will deteriorate quicker.
- Due to self-discharge, the battery slowly loses its charge during storage.
- The battery's capacity decreases over time but proper storage will maximize its service life.
- When using it again after a long storage period, be sure to charge the battery pack before using
 it. Also, if you are using it again after storing it for 6 months or longer, have your bicycle inspected and maintained at a dealer.

K. Transport

The batteries are subject to the Dangerous Goods Legislation requirements. When being transported by third parties (e.g. via air transport or forwarding agency), special requirements on packaging and labels must be observed. To prepare the item for shipping, consult a hazardous materials expert. The customer can transport the batteries by road without further requirements. Do not transport damaged batteries.

Tape or mask off open contacts and pack up the battery pack in such a manner that it cannot move around in the packaging. Be sure to observe all local and national regulations. In case of questions concerning transport of the batteries, please refer to a bicycle dealer.

L. Consumer information

Disposal

The Drive Unit, battery pack, battery charger, display unit, speed sensor set, accessories and packaging should be sorted for environmental-friendly recycling.

Do not dispose of the bicycle or its components as household waste.

⚠ WARNING

Do not dispose of the battery pack in a fire or expose it to a heat source. Doing so could cause fire, or explosion, resulting in serious injury or property damage.

For EU countries:



According to the European Guideline 2012/19/EU, electrical devices/tools that are no longer usable, and according to the European Guideline 2006/66/EC, defective or used battery packs/batteries, must be collected separately and disposed of in an environmentally correct manner.

Please return battery packs that are no longer usable to a bicycle dealer.

M. Simplified declaration of conformity

Hereby, YAMAHA MOTOR CO., LTD. declares that the radio Equipment type [X0P10], [X1R01] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://global.yamaha-motor.com/business/e-bike-systems/document/

^{*} Applies to Display X and Display C.

N. Troubleshooting

E-Bike Systems

Symptom	Check	Action
	Is the display unit's power on?	Press the power switch on the display unit to turn the power on.
	Is the battery pack installed?	Install a charged battery pack.
	Is the battery pack charged?	Charge the battery pack.
Pedaling is difficult.	Has the bicycle remained not operated for 5 minutes or longer?	Turn the power on again.
	Are you riding on a long inclined road or carrying a heavy load during summertime?	This is not a malfunction. It is a safeguard engaged when the temperature of the battery pack or the Drive Unit is too high. Power assist will be restored once the temperature of the battery pack or the Drive Unit has decreased. Also, you can make this less likely to occur by shifting to a lower gear than you would usually use (for example, by shifting from second to first gear).
	Is the air temperature low (roughly 10 °C or below)?	During the wintertime, store the battery pack indoors before use.
	Are you charging the battery pack while it is mounted on the bicycle?	Stop charging the battery pack.

Symptom	Check	Action
The Drive Unit turns on and off while riding.	Is the battery pack correctly installed?	Check to make sure the battery pack is locked in place. If this problem still occurs with the battery pack firmly locked in place, there may be a loose connection with the battery pack terminals or wires. Have a bicycle dealer inspect your bicycle.
Strange rumbling or crunching noises come from the Drive Unit.		There could be a problem inside the Drive Unit. Have a bicycle dealer inspect your bicycle.
Smoke or unusual odor comes from the Drive Unit.		There could be a problem inside the Drive Unit. Have a bicycle dealer inspect your bicycle.

Symptom	Check	Action
(Display A) The main riding display and "Er" are displayed alternately, and an error description is indicated in the function display.		
(Display X) The assist mode lamp lights up in red, the main riding display and "ER" are displayed alternately, and an error description is indicated in the function display.		
FR STRUMENTS FOR		The problem occurs in the e-Bike Systems. Turn off the power and then turn it on again. If the problem cannot be
* 31)TRQ SMSR PAR OFF/ON		solved, have your bicycle inspected by a dealer as soon as possible.
(Display C) Error messages other than those related to the battery are displayed here as "ER" together with a description of the error underneath.		
ER 31) TRO SNSR PWR OFF/ON 200		

Symptom	Check	Action
	Are you fully charging the battery pack?	Charge the battery pack until full (F).
Traveling range has decreased.	Are you using the system under low-temperature conditions?	Normal traveling range will be restored when the ambient temperature rises. Additionally, storing the battery pack indoors (in a warm location) before use will improve traveling range under cold conditions.
	Is the battery pack worn out?	Replace the battery pack.
(Display A) The speed is not displayed even while riding, and the function display is flashing.		
(Display X) An assist mode lamp lights up in red and an error description is indicated in the function display. Company Com		The speed sensor cannot detect a correct signal. Turn off the power to the display unit and then turn it on again. Select the assist mode and then ride for a short distance. Also, make sure the magnet is mounted correctly on the spokes of the wheels.
STD 28 SPD SNSR CHK MAGNET		

Symptom	Check	Action
(Display A) The speed is displayed but the function display is flashing. (Power assist is stopped.)		
-1249ao		
(Display X) The assist mode indicator and function display are flashing. (Power assist is stopped.)		This is not a malfunction. It is in a state that the operation of the power assist system is normal. This state may occur depending on the pedaling strength and riding speed, but it returns to normal condition if it is confirmed that the system is normal.
(Display C) The function display are flashing. (Power assist is stopped.)		
STD Amode 13 STD 54 TRIP DIST 33.1 km 33.1 km		

Symptom	Check	Action
(Display A) The main riding display and "Er" are displayed alternately, and an error description is indicated in the function display.		
(Display X) The assist mode lamp will light up in red, and the main riding display and "ER" are displayed alternately, and an error description is indicated in the function display.		The problem occurs in the battery pack. Turn off the power and then turn it on again. If the problem cannot be solved, have your battery pack inspected by a dealer as soon as possible.
(Display C) Error messages relating to battery errors are displayed here as "ER" together with "BATTERY" and a description underneath.		
FR 74) BATTERY PWR OFF/ON Ookm/h		

Symptom	Check	Action
(Display A) The Automatic Support mode indicator is flashing.		
(Display X) "A:###" and "###" on the assist mode indicator are alternately displayed. A:SID AVE → SID AVE 20.0 km/h For example, in the case of Standard mode (Display C) The Automatic Support mode indicator is flashing.		There could be a problem inside the Drive Unit. Turn off the power to the display unit and then turn it on again. If the problem cannot be solved, have your bicycle inspected by a dealer as soon as possible.

Pushing assist function

Symptom	Check	Action
	Is the tire locked for a few seconds?	Release your finger from the pushing assist switch for a moment, and after making sure that the tires turn, push the switch again.
The pushing assist function turns off.	Did you pedal while the pushing assist function was running?	Take your feet off the pedals and remove your finger from the pushing assist switch for a moment. Then press the switch again.

Power supply of external devices via USB connection

^{*} Applies to Display X and Display C.

Symptom	Check	Action
	Is the display unit's power on?	Press the power switch on the display unit to turn the power on.
	Is the USB version correct?	Use an external device that complies with USB 2.0.
Power is not supplied.	Is the USB cable type correct?	Use an OTG cable. Also connect the host side to the display.
	Is the USB cable firmly connected?	Re-connect the USB cable.
	Is the USB receptacle or USB plug terminal dirty or wet?	Disconnect the USB cable from the display unit and external device. Remove the dirt and water on the USB receptacle and USB plug terminal and reconnect the cable.
	Is USB setting	(Display X) Set the USB settings to "PWR SPLY" by referring to "Stopwatch and settings" or turn off the power and then turn it on again.
	set to "COMM"?	(Display C) Set the USB settings to "Power Supply" by referring to "Settings" or turn off the power and then turn it on again.

Wireless communication with Bluetooth low energy technology

* Applies to Display X and Display C.

Symptom	Check	Action
Wireless communication cannot be used.	Are both the wireless communication settings of the display unit and your wireless communication equipment turned on?	(Display X) Set the communication profiles by referring to "Stopwatch and settings", and then set the correct communication profiles of the wireless equipment or application software. (Display C) Set the communication profiles by referring to "Settings", and then set the correct communication profiles of the wireless equipment or application software.
	Are the communication profiles of the wireless equipment or application software that communicates wirelessly with the communication profiles of the display correct?	
The display values of the external wireless communication equipment are wrong.	Did you change the settings of the communication profiles?	Reset pairing for a moment, set the communication profiles of the display, and then establish pairing again. For resetting of pairing and the procedure of establishing pairing, refer to the instruction manual supplied with the wireless communication equipment.

Battery pack and charger

Symptom	Check	Action
	Is the power plug firmly connected? Is the charging plug firmly inserted in the battery pack?	Reconnect and try charging again. If the battery pack still does not charge, the battery charger might be malfunctioning.
Cannot charge	Are the residual battery capacity indicator lamps lit?	Review charging method and try charging again. If the battery pack still does not charge, the battery charger might be malfunctioning.
	Are the battery charger or battery pack contact terminals dirty or wet?	Remove the battery pack from the battery charger and the charger plug from the socket. Use a dry cloth or cotton swab to clean the charger and battery contact terminals. Then reconnect both the battery pack and the battery charger.
(Multi location type) (Multi location type)	There is a contact fault in the contact terminals.	Remove the battery pack from the bicycle. Then connect the charging plug into the battery pack. (If battery capacity indicator lamps still flash alternatively, there might be a fault in the battery pack). When the battery pack is remounted on the bicycle and the power switch of the display unit is pressed, if battery capacity indicator lamps still flash alternately, there might be a fault in the Drive Unit.

Symptom	Check	Action
(Rear carrier type) (Down tube ty	There is a contact fault in the contact terminals.	Remove the battery pack from the battery charger, mount the battery on the bicycle and press the power switch of display unit. When the charging plug is reconnected into the battery pack, if battery capacity indicator lamps still flash simultaneously, there might be a fault in the battery charger.
(Multi location type)	Is the charging connector on the battery pack wet?	Clean the charging connector and charging plug. Then dry them. Afterwards, connect the charging plug to the charging connector.
Both side battery capacity indicator la are flashing simultaneously. (Rear carrier type) (Down tube type) (Multi location type)		The battery pack protection feature has been activated and the system cannot be used. Replace the battery pack at a bicycle dealer as soon as possible.
The battery charger emits abnormal noises, foul odors or smoke.		Unplug the charger plug and immediately cease operation. Have a bicycle dealer inspect your bicycle.
The battery charger becomes hot.	It is normal for the battery charger to become somewhat warm during charging.	If the battery charger is too hot to be touched by hand, unplug the charger plug, wait for it to cool, and consult a bicycle dealer.

Symptom	Check	Action
After charging, all of the battery capacity indicator lamps do not light up when the battery capacity indicator button "(h)" is pressed.	Has the charger plug been unplugged or the battery pack removed during charging?	Charge the battery pack again.
	Did you start charging with the battery pack at a high temperature, such as immediately after use?	Move to a location where the battery temperature can reach the range where charging is possible (15–25 °C), and then start charging again.
After disconnecting the charging plug on the battery charger from the battery pack, the battery capacity indicator lamps continue to light up.	Is the charging connector on the battery pack wet?	Clean the charging connector and charging plug. Then dry them.

O. Specifications

Range of assist speed		0 to less than 25 km/h	
Type		Brushless DC type	
Electric motor		Rated output	250 W
Assist power control method		Control method depends on pedaling torque and bicycle speed	
	Rear carrier type	Туре	PASB5 (Lithium-ion battery)
		Voltage	36 V
	400 Wh/500 Wh	Capacity	11 Ah/13.6 Ah
		Number of battery cells	40
		Туре	PASB5 (Lithium-ion battery)
	Down tube type 400 Wh/500 Wh	Voltage	36 V
	400 0011/500 0011	Capacity	11 Ah/13.6 Ah
Battery		Number of battery cells	40
pack		Туре	PASB6 (Lithium-ion battery)
	Multi location type 500 Wh	Voltage	36 V
	500 7711	Capacity	13.4 Ah
		Number of battery cells	40
	Multi location type 600 Wh	Туре	PASB4 (Lithium-ion battery)
		Voltage	36 V
		Capacity	16.5 Ah
		Number of battery cells	50
		Туре	PASC5
		Input voltage	AC 220–240 V/50–60 Hz
		Maximum output voltage	DC 42 V
В	attery charger	Maximum output current	DC 4.0 A
		Maximum consumed power	310 VA/180 W (Charged at AC 240 V)
		Applicable type battery	PASB2/PASB4/PASB5
Battery charger		Туре	PASC6
		Input voltage	AC 220-240 V/50-60 Hz
		Maximum output voltage	DC 42 V
		Maximum output current	DC 4.0 A
		Maximum consumed power	310 VA/180 W (Charged at AC 240 V)
		Applicable type battery	PASB6

Display unit (Display X)	Power supply portion	USB receptacle type	USB2.0 Micro-B
		Output current	Max. 1000 mA
		Rated voltage	5 V
		Communication system	Bluetooth version 4.0 (Bluetooth low energy technology)
		Output power	–9.27 dBm (e.i.r.p.)
		Communication range	Line-of-sight distance approx. 1 m (3 ft) without interference
		Frequency band	2.4 GHz band (2.400–2.4835 GHz)
		Modulation method	GFSK
		Supported profiles	CSCP*1 CPP*2
		Model No.	X0P10
		Manufacturer	YAMAHA MOTOR CO., LTD. 2500 Shingai, Iwata, Shizuoka 438-8501, Japan
		Trade mark/Trade name	⊗YAMAHA

^{*1} CSCP (Cycling Speed and Cadence Profile)
Corresponds to the wheel revolution data and crank revolution data.

- *2 CPP (Cycling Power Profile)
 Corresponds to the wheel revolution data, crank revolution data, instantaneous power, and accumulated energy.
- Communication is not necessarily guaranteed with all wireless communication devices that have the same profiles as this system.
 - Even when a device complies with the specification for Bluetooth low energy technology, there may be cases where the characteristics, specifications, or communicative environment of the device with this technology make it impossible to connect, or may result in different control methods, display or operation.
- YAMAHA MOTOR CO., LTD. can not be held liable in any way for damages or other loss resulting from information leaks during the communication via Bluetooth low energy technology.

Display unit (Display C)	Power supply portion	USB receptacle type	USB2.0 Micro-B
		Output current	Max. 1000 mA
		Rated voltage	5 V
		Communication system	Bluetooth version 4.0 (Bluetooth low energy technology)
		Output power	-5.39 dBm (e.i.r.p.)
		Communication range	Line-of-sight distance approx. 1 m (3 ft) without interference
		Frequency band	2.4 GHz band (2.400–2.4835 GHz)
		Modulation method	GFSK
		Supported profiles	CSCP*1 CPP*2 YEP1.0*3
		Model No.	X1R01
		Manufacturer	YAMAHA MOTOR CO., LTD. 2500 Shingai, Iwata, Shizuoka 438-8501, Japan
		Trade mark/Trade name	®YAMAHA

- *1 CSCP (Cycling Speed and Cadence Profile)
 - Corresponds to the wheel revolution data and crank revolution data.
- *2 CPP (Cycling Power Profile)
 - Corresponds to the wheel revolution data, crank revolution data, instantaneous power, and accumulated energy.
- *3 YEP1.0
 - The e-Bike profile preset by YAMAHA MOTOR CO., LTD.
 - Navigation information (Compass) and fitness support (Fitness) can be displayed on the display unit by pairing the smartphone application with YEP 1.0.
- Communication is not necessarily guaranteed with all wireless communication devices that have the same profiles as this system.
 - Even when a device complies with the specification for Bluetooth low energy technology, there may be cases where the characteristics, specifications, or communicative environment of the device with this technology make it impossible to connect, or may result in different control methods, display or operation.
- YAMAHA MOTOR CO., LTD. can not be held liable in any way for damages or other loss resulting from information leaks during the communication via Bluetooth low energy technology.



